

Exhibit AC

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



The Analysis of Johnson & Johnson's Historical Product Containers and Imerys' Historical Railroad Car Samples from the 1960's to the Early 2000's for Amphibole Asbestos

2nd Supplemental Report



Anthophyllite Bundle 1967

William E. Longo, Ph.D.

Mark W. Rigler, Ph.D.

Materials Analytical Services, LLC
3945 Lakefield Court
Suwanee, GA 30024

February 1, 2019

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



The Analysis of Johnson & Johnson's Historical Product Containers and Imerys' Historical Railroad Car Samples from the 1960's to the Early 2000's for Amphibole Asbestos

Supplemental Report

This supplemental report contains the following new information obtained by MAS:

1. In the previous reports, Lee Poye STS samples 20180061-31F (STS 065) and 20180061-31G (STS 065) was assumed to be two samples from the same J&J container STS 065. This assumption was based on that both samples had the same J&J container I.D. of STS 065. Recently we examined container photographs of STS 065 and discovered that the J&J I.D. STS 065 was for two containers in a single package. The 31F sample is for a white STS "Regular" container and for sample 31G, "peach color" STS container that has a "SPICE" label at the top of the container. This new information changed the total number of containers/samples analyzed from 71 to 72 and the total positive samples from 49 to 50. This report was corrected to reflect this information.
2. Correct typographical errors and editing for clarification.
3. This 2nd Supplement Report does not contain any new analytical data.

Overview

Historical J&J Containers

This 2nd supplemental report describes the procedures and methodology used by both MAS and J³ Resources Inc. to analyze 72 separate historical containers and samples of Johnson & Johnson's (J&J) Baby Powder (JBP), Shower to Shower (STS) and Imerys' railroad car cosmetic talcum powder for the possible presence of amphibole asbestos. The J&J and Imerys' containers and samples analyzed for this report were all supplied by both J&J and Imerys from their historical inventory.

The 72 J&J and Imerys-supplied historical cosmetic talcum powder containers/samples analyzed for this report, were chosen from the 1960's, 1970's, 1980's, 1990's and early 2000's.

The 72 product sample set consisted of 57 JBP (with Asian)/STS containers, and 15 historical Imerys' samples that were described as "railroad car" samples. The source of the talcum powder for these historical JBP/STS and Imerys containers/samples came from both the Italian

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



(1960's, JBP/STS and Vermont (1960's, 1970's, 1980's, 1990's, early 2000) talc mines. Included in this report are seven Asian Historical JBP samples that MAS analyzed from possibly only the 1980's. The source of the talc that J&J used for these historical Asian samples was from the Dongyang talc mine in Korea.

Of the 57 Historical JBP/STS containers reported here, 34 were JBP (with Asian) and 23 were STS.

Historical Imerys Samples

The additional 15 historical Imerys-supplied railroad car samples incorporated into this supplemental report were chosen from 1989, the 1990's and the early 2000's.

The addition of 15 Imerys' samples brings the total number of both historical containers (JBP/STS) and historical samples (Imerys) that MAS has now analyzed for the MDL to 72. This is in addition to the 35 JBP/STS containers (March 11, 2018 Supplemental Report) that were supplied by both plaintiffs' counsel and MAS.

This now would bring the total number of J&J/Imerys cosmetic talcum powder samples analyzed by MAS to 107.

J³ and MAS' Analysis of Historical STS Samples

Of the 57 historical JBP/STS talcum powder containers that were analyzed and reported here, 41 JBP (with Asian)/STS containers were analyzed by MAS and 16 STS containers (MAS verified by ATEM & PLM) were previously analyzed by Lee Poye of J³ Resources Inc., located in Houston, Texas.

For the Lee Poye ATEM analysis, initially MAS was unable to verify the results of two J³ ATEM STS sample analyses (20180061-63D and 20180061-10D). Both of these samples were reported to contain one asbestos anthophyllite structure in each. These two STS samples were not reported in our November 11, 2018 Supplemental Report since we could not verify if they were either positive or negative for amphibole asbestos.

Since the November 11, 2018 report, MAS has received the 16 STS samples (16 containers) from Lee Poye and has analyzed all of these samples by the PLM/Blount method. The two STS samples (20180061-63D and 20180061-10D) that MAS could not verify by ATEM, were positive for regulated amphibole by the Blount/PLM method.

The two STS containers positive for amphibole asbestos are now included into this supplemental report. Our November 11, 2018 expert report provided analysis of 55 historical J&J product containers, and with the addition of these two now verified (Lee Poye STS product

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



containers 20180061-63D and 20180061-10D), this 2nd supplemental report is now providing the analytical results for 57 historical JBP/STS containers.

Also, when MAS analyzed five J³ ATEM non-detect STS samples by the Blount/PLM method, four of these five J³ ATEM non-detects were found to be positive for amphibole asbestos by the Blount/PLM method. The one remaining ATEM non-detect J³ STS sample (20180061-02D), was also found to be a non-detect for asbestos by the PLM/Blount method.

As described in our November 11, 2018 report, MAS sent a number of the historical J&J samples to J³ Resources for both PLM and XRD analysis using the ISO 22262-1 and ISO 22262-3 protocols. For this supplemental report, 19 additional historical J&J samples (18 containers) (M69042, M69248 and M68233) were sent to Lee Poye for XRD analysis using the ISO 22262-3 method.

Cosmetic Talc Analytical Methods

The three principle analytical methods used by both J³ and MAS for the analysis of the 57 J&J cosmetic talc containers were X-ray diffraction (XRD), polarized light microscopy (PLM) and analytical transmission electron microscopy (ATEM). For the 15 individual historical Imerys' railroad car samples, were only analyzed by the PLM (ISO & Blount) and ATEM methods. The Imerys' railroad car samples were not analyzed by XRD. The reasons for this will be discussed later in this report.

The three analytical methods used in this report all have strengths and weaknesses where it is expected, that amount of amphibole asbestos content would be at or below 0.1 wt. %.

XRD

For cosmetic talc the XRD has the advantage of analyzing very large samples as compared to either PLM or ATEM. The disadvantages are 1) poor analytical sensitivity for bulk cosmetic talc samples when the potential amphibole asbestos concentration is typically below 0.1 to 0.3 weight % (wt.%), and 2) XRD cannot determine the crystalline habit (fibrous vs. non-fibrous) of amphibole minerals. However, for the majority these samples, XRD (ISO 22263-3) was used so that a comparison of the results to both PLM and ATEM analysis could be made in this report.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



PLM

The PLM method is primarily used today for the analysis of asbestos-added products where the asbestos-content of these products are typically over 1 % by weight.^{1,2,3}

The strengths of the method are that it can positively identify the different regulated asbestos mineral types and provide a qualitative estimate of the weight percent of asbestos. The primary weaknesses of the method are 1) analytical sensitivity issues for samples that may contain less than 0.1 wt. % of asbestos such as cosmetic talcs and 2) because asbestos fiber and bundle structure resolution in the PLM method is dependent on the wave length of light, asbestos particles must be at least 0.5 μm in the smallest dimension to be visible. Interesting enough, Dr. Walter McCrone stated: *"I have never seen rolled talc plates as fibers"* page 44, 3rd paragraph. For these analysis the ISO 22262-1 PLM method was used.

ATEM

It is well recognized that the use of an analytical transmission electron microscope (ATEM) is the only analytical method with the appropriate sensitivity for the analysis of trace mineral concentrations that can be much less than 0.01 wt. %.

ATEM Strengths are: 1) it can positively identify potential fibrous chrysotile and amphibole asbestos structures by energy dispersive X-ray analysis (EDXA) for mineral fiber chemistry and crystalline structure information by selective area electron diffraction (SAED) and 2) The ATEM provides good morphology information that can, in most cases, distinguish between single fibers and bundles of regulated asbestos fibers.

The primary weakness for ATEM analyses of amphibole asbestos in cosmetic talcs is the sample preparation where overloading issues with the talc particles affects the analytical sensitivity of typical ATEM sample preparation procedures. Increasing analytical sensitivity usually involves the examination of hundreds of TEM grid openings and requires significant hours of TEM instrumentation time. Also, the ATEM is typically biased against detecting very large asbestos bundles that are routinely found by PLM.

¹ ISO 22262-1: 2012E Air Quality Bulk Materials Part 1: Sampling and Qualitative Determination of Asbestos in Commercial Bulk Samples.

² The Asbestos Particle Atlas, Dr. Walter C. McCrone, Director McCrone Research Institute, Ann Arbor Science, 1980.

³ EPA/600/R-93/116.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Heavy Liquid Separation: PLM and ATEM Method

The concern over analytical sensitivity for amphibole asbestos in cosmetic grade talc was first published in the peer-reviewed literature by A. M. Blount.^{4,5} It was estimated by Dr. Blount that for every 1,000 amphibole particles present there would be approximately 1,000,000 talc particles. To overcome this problem the author described the use of a heavy liquid density separation method that reduced the number of talc particles as compared to the potential presence of amphibole asbestos thereby increasing analytical sensitivity for the PLM analysis of the talc samples.

In addition to increasing the analytical sensitivity of the PLM analysis for cosmetic grade talc using the heavy liquid separation method as published by Blount, the heavy liquid separation method can also be used to substantially increase the analytical sensitivity of the ATEM analysis of cosmetic talc samples as described in the ISO 22262-2 bulk materials method.⁶

Reducing the amount of talc increases the sensitivity of the ATEM analysis and it also increases the amphibole sensitivity by the ATEM method. It would also increase the efficiency of the analyst by eliminating the need to examine hundreds of TEM grid openings to achieve reasonable analytical sensitivity.

References for the use of heavy liquid density separation of cosmetic talc during the sample preparation stage was described first by Dr. Fred Pooley in 1971, the Colorado School of Mines Research Institute in 1973 and by Windsor Minerals, Inc., Dartmouth College in 1974.^{7, 8, 9}

⁴ A.M. Blount "Amphibole Content of Cosmetic and Pharmaceutical Talcs", Environ. Health Perspectives, Vol. 94, 1991, pp. 225-230.

⁵ Process Mineralogy IX: The Minerals, Metals and Materials Society, 1990, A.M. Blount "Detection and Quantification of Asbestos and Other Trace Minerals in Powdered Industrial-Mineral Samples", pp. 557-570.

⁶ ISO 22262-2: 2014E Air Quality-Bulk Materials Part 2: Quantitative Determination of Asbestos by Gravimetric and Microscopical Methods.

⁷ March, 1974: to Windsor Minerals, Inc., Windsor, Vermont from R.C. Reynolds, Jr., Department of Earth Sciences, Dartmouth College, Hanover, New Hampshire: "Analysis of Talc Products and Ores for Asbestiform Amphiboles".

⁸ Research and Engineering Center, August 11, 1971 Memo to File. FDA Meeting-Asbestos in Cosmetic Talc, August 3, 1971-Washington, D.C.

⁹ Colorado School of Mines Research Institute "A Procedure to Examine Talc for the Presence of Chrysotile and Tremolite-Actinolite Fibers".

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Over All Summary of Results

J&J and Imerys

The 57 JBP/STS containers (including the 7 historical Asian JBP containers) and the 15 individual Imerys' railroad car samples gives a total of 72 historical containers/samples that were incorporated into this supplemental report.

A summary of these results are as follows;

1. The analysis of 34 historical JBP (with Asian) containers found that 24 were positive or 71 % positive.
2. The analysis of 23 historical STS containers found that 18 were positive or 78 % positive.
3. The analysis of 15 individual Imerys' railroad car samples found that 8 were positive or 53 % positive.

Excluding the seven JBP Asian historical containers would then give a total of 65 JBP/STS & Imerys' containers/railroad car samples analyzed; 44 were positive (68 %) for amphibole asbestos.

A summary of the results excluding the Asian JBP containers:

1. 27 historical JBP container analyses; 18 were positive or 67 % positive.
2. 23 historical STS container analyses; 18 were positive or 78 % positive.
3. 15 individual Imerys' railroad car samples; 8 were positive or 53 % positive.

XRD

All 50 JBP/STS (Italian and Vermont talc mine source) talcum powder samples analyzed by XRD were found to be negative or non-detect by this method. Of the seven Asian JBP containers analyzed, two were positive and one sample was inconclusive. The 15 Imerys' railroad car samples were not analyzed XRD.

PLM

When 56 of the JBP/STS containers and Imerys samples were analyzed by MAS using PLM (ISO 22262-1) method (no heavy liquid density separation), 18 of the samples were positive for regulated amphibole asbestos or 32 % positive.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



The Blount/PLM heavy density method found that out of the 72 JBP/STS and Imerys' containers/samples analyzed, 41 or 57 %, were positive for regulated amphibole asbestos.

For the ISO PLM method the amount of asbestos found for the positive samples were all <0.1 %. The Blount PLM method the amount of asbestos found ranged from <0.1 % to 0.7 %.

ATEM

The ISO 22262-2 ATEM (MAS and Lee Poye verified) analysis showed that in 70 JBP (With Asian)/STS and Imerys' railroad car talcum powder samples, 42 or 60 %, contained detectable amounts of amphibole asbestos fibers and bundles (tremolite solid solution series and or anthophyllite solid solution series). Neither chrysotile nor anthophyllite without iron was detected in any of the ATEM samples.

By ATEM, the amphibole asbestos concentration for the 42 positive JBP/STS and Imerys talcum powder samples ranged from between 4,370 fibers-bundles/gram to 268,000 fibers-bundles/gram of talcum powder.

All of analysis (PLM, Blount/PLM and ATEM), 50 (69 %) of the 72 container/samples were positive for regulated amphibole asbestos.

Two different regulated amphibole asbestos types were found. These were the tremolite asbestos solid solution series amphiboles which includes tremolite, winchite, richterite, and actinolite (only tremolite was detected by ATEM) and the anthophyllite asbestos solid solution series that includes anthophyllite, iron-rich anthophyllite, ferro-anthophyllite, cummingtonite and grunerite. Only iron-rich anthophyllite solid solution series asbestos structures were detected.

As expected, no anthophyllite asbestos (without iron) or chrysotile fibers/bundles were found in any of the 42 positive J&J talcum powder samples we analyzed by ATEM. A more detailed explanation for the lack of anthophyllite (without) iron or chrysotile fiber findings can be found in the Discussion and Conclusion Section of this report.

Fibrous Talc MAS Analysis

In addition to tremolite series and anthophyllite series amphibole asbestos, 42 of the 57 JBP (with Asian)/STS and Imerys' talcum powder samples analyzed by ATEM were observed to contain fibrous talc. A semi-quantitative calculation for the amount fibrous talc for each of the positive ATEM samples was also done. The concentration for each of the fiber talc positive ATEM samples ranged from 290,000 talc fibers per gram to 1,020,000 talc fibers per gram of product.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



The 16 J³ ATEM container analysis did not provide enough information to perform a semi-quantitative fibrous talc calculation, and therefore, was reported as not applicable (NA).

The ISO 22262-1 PLM method found that for the 56 Italian, Vermont and China sourced talc containers/samples analyzed by MAS, 55 (98 %) contained fibrous talc. The Blount/PLM method showed that of 72 analyzed, 20 (28 %) contained fibrous talc.

Materials and Methods

Sample Log-In Procedure

The JBP/STS and Imerys' talcum powder samples that were analyzed by MAS for this report were provided by both Johnson & Johnson and Imerys from their historical sample depository. The J&J historical samples were received by MAS in four separate sets and logged into MAS' sample tracking system and assigned to MAS project numbers as follows; **M68233**, two samples received at MAS on February 9, 2018. **M68503**, 75 samples received at MAS on March 29, 2018. **M69042**, 10 samples received at MAS on July 17, 2018 and **M69248**, seven Asian samples received at MAS on August 21, 2018. The Imerys historical samples were received by MAS in two separate sets and logged into MAS' sample tracking system and were assigned MAS project numbers as follows; **M69751**, 43 samples received at MAS on 12/7/2018 and **M69757**, 37 samples were received at MAS on 12/10/2018.

ISO-22262-1 and 3 PLM/XRD (J³ Resources)

On June 1, 2018, 75 J&J sample splits from M68503 and four spiked samples (tremolite and anthophyllite asbestos) were sent to Lee Poye for PLM and XRD analysis by ISO 22262-1 and 3.

On November 28, 2018, 10 sample splits from M69042, seven sample splits from M69248 (Asian JBP Containers), and four spiked samples (tremolite and anthophyllite asbestos) were sent to Lee Poye for XRD analysis by ISO 22262-3. The results were provided to MAS from J³ in a December 12, 2018 report and the data was added to this supplemental report.

On December 12, 2018, two sample splits from project M68233 were sent to Lee Poye for XRD analysis.

The results were provided to MAS from J³ in a December 20, 2018 report and the data was added to this supplemental report.

Muffle Furnace

Approximately 1 to 2 grams (Sartorius Research Balance) of the 72 talcum powder samples was removed from each of the JBP/STS containers and Imerys samples and placed in a 15 ml glass

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



scintillation vials. The scintillation vials were then placed in a Fisher Scientific Iso-temp muffle furnace Model #650 at 400°F for a minimum of 4 hours to remove any organic material.

ISO-22262-1 PLM (MAS)

Approximately 60 to 100 milligrams each of the 56 talcum powder samples were analyzed by the ISO 22262-1 PLM method. Three mounts of the talcum powder sample are placed on two glass slides, a drop of the 1.605 refractive index fluid was placed onto each of the three talcum powder mounts, stirred with the point of a scalpel blade, and then covered with an 18 x 18 mm glass cover slip. The entire area of the three coverslip mounts were examined (972 mm²). Positive identification of amphibole asbestos was done by morphology, refractive indices, elongation, angle of extinction, and birefringence. For positive samples, a visual estimation of the quantity of asbestos observed was based on eye calibration through review of lab generated weight percent standards. Visual calibration was augmented by the use of area percent charts.

PLM/Blount Method

Approximately 60 to 100 mg (Sartorius Research Balance) from each of the 72 JBP/STS and Imerys' muffled talcum powder sample aliquots were placed into individual labeled Eppendorf micro-centrifuge tubes (MCT) (Premium 1.5mL MCT Graduated Tubes Cat. No. 05-408-12).

Density Separation

Approximately 1.2 ml of Heavy Liquid (Lithium heteropolytungstates solution, GeoLiquids, Inc., Cat. No. LST010 with a stated density 2.85 g/cc diluted with distilled water to a density of 2.810 (determined by a VWR Hydrometer model number 34620-1109) was added to the MCT containing the 100 mg of the JBP/STS and Imerys' talcum powder samples and mixed with a disposable mixing rod for 10 to 20 seconds. The combined talc and LST heavy liquid (density 2.810 grams/cc) samples were placed into a vacuum desiccator (JEOL EMDSC-U10A) to remove air bubbles for 3 minutes at a pressure of approximately 8 Torr prior to centrifugation.

The MCT sample tubes were then placed in an Eppendorf micro-centrifuge (Model No. 5415D) set at 7,000 RPM for a total of 10 minutes at room temperature. After removal of the MCT tubes from the centrifuge, the talc/heavy liquid was pipetted off from the top of the centrifuge tube, distilled water was added, mixed and the sample was re-centrifuged as described above. This step was repeated two more times. After the third centrifugation/heavy liquid removal step, the heavy particles were removed from the bottom of the centrifuge tube with a pipette with several drops of water containing the heavy particles then transferred to a glass

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



microscope slide and allowed to dry. The heavy particle residue on the glass slide was then analyzed by the ISO 22262-01 PLM method.

ATEM-ISO 22262-2 TEM Sample Preparation


Density Separation

Approximately 20 to 60 mg (Sartorius Research Balance) from the muffled talc sample aliquot was placed into a labeled Eppendorf micro-centrifuge tube (MCT) (Premium 1.5mL MCT Graduated Tubes Cat. No. 05-408-12). Approximately 1.2 ml of Heavy Liquid (Lithium heteropolytungstates solution, GeoLiquids, Inc., Cat. No. LST010 density 2.85 g/cc) was added to the MCT containing the talc samples prepped and mixed with a disposable mixing rod for approximately 10 to 20 seconds. The combined talc and LST heavy liquid samples were then placed into a vacuum desiccator (JEOL EMDSC-U10A) to remove air bubbles for 15 minutes at a vacuum pressure of approximately 8 Torr prior to centrifugation.

The MCT sample tubes were then placed in an Eppendorf micro-centrifuge (Model No. 5415D) set at 9,000 RPM for total of 90 minutes at room temperature. After removal of the MCT tubes from the centrifuge, they were flash frozen in liquid nitrogen and the MCT tip was immediately removed with a pre-cleaned 6 inch steel cleaver into a clean 45 mL flat bottom disposable centrifuge tube. Figure 1 shows the cut area on the MCT tip.

Figure 1:

Cut Line for Removal of MCT Tip

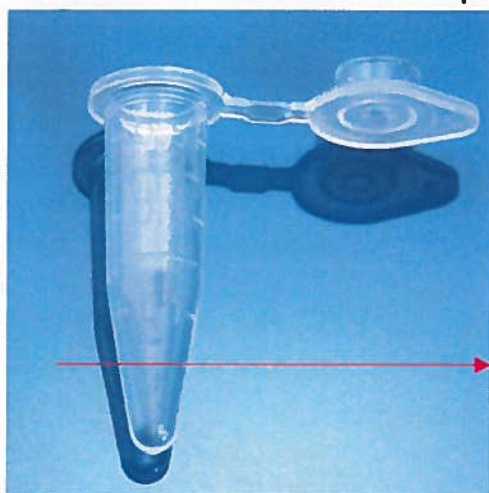

Red line is showing cut area on MCT tip

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Deionized water was added to the centrifuge tube to bring the volume to approximately 45 ml. The 45 ml centrifuge tube was capped and inverted by hand 5 times to distribute the collected material in the bottom of the MCT tip. The 45 ml mixture was then immediately and continuously filtered onto a 25 mm Polycarbonate filter (PC) with a 22µm pore size. After the mixture was filtered, the excess heavy liquid was washed through the filter with the addition of approximately 100 ml of deionized water. The prepared PC filter was placed in a new disposable plastic 47mm petri dish and allowed to dry at ambient room temperature in a HEPA hood for a minimum of 2 hours. The processed PC filter samples were directly prepared onto TEM 100 µm size grids (2 for analysis and 1 for archive) using either the standard TEM filter preparation protocol for MCE filters or for the PC filters.^{10, 11, 12, 13, 14, 13, 14}

ATEM Amphibole Analysis Procedure

JEOL 1200EX ATEMs equipped with either a Noran or an Advanced Analysis Technologies (light element) energy dispersive x-ray analyzer (EDXA) were employed for this analysis. ATEM samples were analyzed at a screen magnification of 20,000X. Amphibole fibers or bundles with substantially parallel sides and an aspect ratio of 5:1 or greater, and at least 0.5µm in length were counted as regulated asbestos fibers and bundles per standard TEM counting rules as described by ASTM D5755, ASTM D5756, ISO 10312, ISO 13794, AHERA (TEM section only) and D7712-11.^{10,11,12,13,14,15}

Positive identification of amphibole asbestos requires EDXA for mineral chemistry confirmation and selected area electron diffraction (SAED) for each amphibole type. At times, amphibole bundles may have a diameter that is too thick to acquire a SAED pattern, then, only the mineral chemistry can be used. For anthophyllite series asbestos, two separate angle SAED were acquired.

¹⁰ D5755-09 "Standard Test Method for Microvacuum Sampling and Indirect Analysis of Dust by Transmission Electron Microscopy for Asbestos Structure Loading.

¹¹ D5756-02 "Standard Test Method for Microvacuum Sampling and Indirect Analysis of Dust Loading by Transmission Electron Microscopy for Asbestos Mass Surface.

¹² ISO 10312 1995-05-01, "Ambient Air Determination of Asbestos Fibers-Direct-Transfer Transmission Electron Microscopy Method.

¹³ ISO 13794 1999 07-15, "Ambient Air-Determination of Asbestos Fibres-Indirect-Transfer Transmission Electron Microscopy Method.

¹⁴ U.S. Environmental Protection Agency (USEPA) 1987. Asbestos Hazard Emergency Response Act, 40 CFR Part 763, Appendix A to Subpart E, USEPA, Washington D.C.

¹⁵ D7712-11 "Standard Terminology for Sampling and Analysis of Asbestos."

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Counting Rules

100 grid openings were analyzed for each of the JBP/STS and Imerys talcum powder samples. The 100 grid opening counts were split evenly between two grids.

All amphibole fibers/bundles that meet the above-stated size criteria were recorded on the MAS TEM structure count bench sheets for each sample. Length and width of each amphibole fiber/bundle was recorded and identified. Every amphibole structure identified and counted by the analyst required observation of an EDXA spectra matching the mineral chemistry for that particular amphibole and a SAED amphibole pattern. EDXA spectra and SAED patterns are recorded/saved for every asbestos amphibole structure found in the samples.

Photomicrographs were taken of the amphibole fibers/bundles found from each of the samples that were positive for amphibole asbestos.

Results were reported as either amphibole asbestos fibers/bundles (structures) per gram of talc or in weight percent. Analytical sensitivity/detection limits were reported as structures per gram. The weight percent analytical sensitivity/detection limit was not provided in the November 11, 2018, since the procedure for calculating the detection limit is to use a theoretical mathematical calculation of one arbitrary minimal fiber dimension. Instead of an arbitrary fiber dimension, a more accurate represented fiber size would be to use an average size for all the of detected amphibole fibers structures analyzed by ATEM in these samples. The average amphibole asbestos structure size was 12.1 μm x 1.1 μm , with an aspect ratio of 11:1. For this report, the more accurate weight detection limit was added to the data sets.

Fibrous Talc Estimation

A number of the JBP (with Asian)/STS and Imerys talcum powder samples were found to contain fibrous talc during both types of the PLM analysis as well as the ATEM analysis. A full quantitative analysis of the number of fibrous (asbestiform) talc particles was not done at this time. For the ATEM, a semi-quantitative estimate of the number of fibrous talc particles present in four random grid openings and observed throughout the 100 grid openings was scored as follows:

- 1) Abundant : (>11 fibrous talc particles)
- 2) Common: (4 to 10 fibrous talc particles)
- 3) Trace: (1 to 3 fibrous talc particles)

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



This estimation was based on the talc fibers/bundles having at least a 5:1 aspect ratio or greater, at least 0.5µm in length and substantially parallel sides. One representative talc fiber or bundle was recorded (EDXA, SAED and photographed) for each of the samples that contained fibrous talc. Also, the finding of fibrous talc on random grid openings provided an overall estimate of how many talc fibers were on 100 grid openings analyzed for each of the samples.

For both PLM methods a visual estimation was made of the identified talc fibers and was reported as either trace or moderate (common).

Process Laboratory Blanks

For each set of samples that were prepared by the heavy liquid method, one process laboratory blank was prepared with each set of samples. These process blank MCE filters were prepared in the same exact manner as the talc samples (heavy liquid, filtration on MCE/PC filters, etc.) but without any talc material. For the TEM analysis, 100 grid openings were analyzed for each of the process blanks per sample set.

Results

J³ RESOURCES INC. ANALYSIS

XRD ISO 22262-3 Method

J³ Analysis

Lee Poye of J³ Resources analyzed 57 JBP/STS containers by the ISO 22262-3 XRD method. Of the 57 JBP/STS containers analyzed, 54 were non-detects, two were positive, and one was inconclusive by the XRD method.

For 50 JBP/STS containers where the source of the talc was either the Italian or Vermont mines, all were non-detects by XRD. The other seven were Asian historical JBP containers (the source of the talc was from the Korea mine) had two positive and one inconclusive and the other four samples were non-detects. The 15 Imerys railroad car samples were not analyzed by XRD.

A summary of all the XRD results are shown in Tables 7 & 8 to this report.

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259



PLM ISO 22262-1 Method

J³ Analysis

Using the ISO 22262-1 PLM method, J³ Resources found that out of 38 samples analyzed, all were negative or non-detects. A summary of the J³ results are also shown in Table 8 in this report.

ATEM of Historical J&J Vermont Talc Shower to Shower Talcum Powder

On July 18, 2018 Lee Poye of J³ Resources, Inc. issued a report (to Joe Satterley of the Kazan Law Firm) of his analysis of 16 historical J&J Vermont talc Shower to Shower talcum powder samples that were split by J&J from their historical Shower to Shower (STS) containers that ranged in date from 1978 to 1986.¹⁶

Of the 16 STS containers analyzed by Lee Poye using the ISO 22262-2 heavy liquid TEM method, 11 of the 16 samples (69%) were positive for anthophyllite asbestos (solid solution series) and five samples were below the detection limit of the method. A summary of the 11 positive results are shown in Table 1.

Table 1

J³ TEM Results for Positive Vermont Talc Shower to Shower Samples

| Laboratory Control Number | J&J Sample Identification Number | STS Container Year | Mass Fraction Percent Wt. | Anthophyllite Asbestos (f/b) Concentration per g |
|---------------------------|----------------------------------|--------------------|---------------------------|--|
| 20180070-07D | 2014.001.0397 | 1978 | 7.3×10^{-4} | 82,370 |
| 20180061-37D | STS001 | 1982 | 3.0×10^{-5} | 9,257 |
| 20180061-38D | STS002 | 1980 | 3.0×10^{-3} | 53,416 |
| 20180061-45D | STS009 | 1982 | 1.9×10^{-3} | 9,000 |
| 20180061-52D | STS016 | 1980 - 1981 | 4.0×10^{-3} | 70,126 |
| 20180061-63D | STS027 | 1980 | 3.5×10^{-5} | 7,419 |
| 20180061-65D | STS029 | 1980 - 1981 | 9.2×10^{-3} | 95,321 |
| 20180061-10D | STS044 | 1980 - 1981 | 2.6×10^{-5} | 12,209 |
| 20180061-15D | STS049 | 1978 | 1.3×10^{-3} | 60,507 |
| 20180061-31F | STS065 | 1986 | 2.9×10^{-3} | 21,964 |
| 20180061-31G | STS065 | 1986 | 5.2×10^{-4} | 29,715 |

¹⁶ J3 Report for the Analysis of Shower to Shower Talc Samples, July 18, 2018.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



The above results were reported by J³ as a mass fraction or weight percent. The calculations to the corresponding anthophyllite fiber/bundle concentrations per gram was done by MAS using the information provided on the J³ TEM count sheets.

Verification of Lee Poye's STS Results

Lee Poye arrived at MAS on the morning of October 31, 2018 with one TEM grid box that contained the prepared TEM grids for J³ project number JHI898969 for the J&J Vermont Talc STS samples. This information was confirmed by Lee Poye, that the TEM grids he brought to MAS was for the historical STS samples that he had previously analyzed.

In turn, MAS provided Mr. Poye with MAS TEM grid boxes for the 10 historical JBP talcum powder samples (MAS M69042). The MAS verification of the J³ analysis was only for the 11 positive TEM sample analysis, the five sample results that were below the detection limit were not verified by MAS, and those results were accepted as true by MAS.

MAS was able to verify nine of the 11 ATEM positive historical STS talcum powder samples reported by J³. The nine positive MAS verified STS ATEM samples, two non-verified STS positive ATEM samples, and the five samples that were below the ATEM detection limit, were included in this overall report and are identified in summary Tables 3 and 4.

A full report of the MAS verification analysis, verified count sheets, asbestos structure photomicrographs, EDXA and SAED data is provided with this report.¹⁷

The overall summary of the results for the three analytical methods used for the 57 JBP/STS containers and 15 Imerys' historical railroad car samples analyzed for this report are summarized in Tables 2, 3, 4, 5, 6, 7, 8 and 9. These summary tables have been organized by decade from the 1960's (Table 2), 1970's (Table 3), 1980's (Table 4), 1990's (Table 5) early 2000's, (Table 6), Asian (Table 7, XRD only), XRD and PLM (Table 8), and Fibrous (Table 9).

ISO-22262-1 Analysis

The ISO 22262-1 PLM analysis showed that out of the 72 JBP (with Asian)/STS containers and 15 Imerys' railroad car samples analyzed by MAS and J³, 18 containers (25%) had detectable amounts of regulated amphibole asbestos, the rest were either non-detects or contained actinolite/tremolite cleavage fragments that had an aspect ratio of < 3:1.

Results for all 18 positive samples were found to contain <0.1 % asbestos. Also, for these positive ISO PLM samples, both regulated actinolite/tremolite and or anthophyllite asbestos were found.

¹⁷ Verification of Lee Poye's TEM Analysis of J&J's Historical Vermont Talc-Containing Shower to Shower Talcum Powder Samples, November 5, 2018.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



A summary of the MAS & J³ ISO 22262-1 PLM analysis results are shown in Tables 2, 3, 4, 5 and 6 in this report.

Comparison of the J³ ISO PLM to MAS ISO PLM Analysis for the Same Sample Set

Both MAS and J³ analyzed the same 22 J&J/STS talc samples by the ISO22262-1 PLM method. Where all 22 of the J³ ISO PLM results were found to be negative, MAS found that 8 of the 21 were positive. A summary of this data is shown in Table 8.

PLM/Blount Method

The Blount/PLM method showed that out of the 72 historical JBP (with Asian)/STS containers and Imerys' railroad car samples analyzed by MAS, 41 (57%) had detectable amounts of regulated amphibole asbestos and the rest were either non-detects or contained only tremolite/actinolite cleavage fragments that had an aspect ratio that was less than 3:1.

These 72 historical containers/samples analysis by the Blount/PLM also includes the 16 Lee Poye historical STS containers that were sent to MAS from J³ on Nov 14, 2018 and received at MAS on Nov 16, 2018.

Results for 41 positive samples were reported as an estimated weight percent range of from < 0.1% to 0.7 %. Also, for these positive Blount/PLM samples, both regulated actinolite/tremolite and or anthophyllite asbestos was detected.

The summary of the MAS Blount/PLM results are shown in Tables 2, 3, 4, 5, and 6 in this report.

ATEM ISO 22262-2 Method

The ISO 22262-2 ATEM heavy liquid separation method showed that out of the 70 historical JBP/STS containers and Imerys' railroad cars samples, 42 (60 %) contained regulated asbestos fibers and bundles. Two types of asbestos amphiboles were detected in these samples, they were either the tremolite asbestos solid solution series and or the anthophyllite solid solution series asbestos. Only the iron-rich anthophyllite asbestos was detected in the ATEM.

The amphibole asbestos structures per gram of talc ranged from below our analytical sensitivity/detection limit of approximately 3,000 - 9,400 fibers/bundles per gram to an amphibole asbestos concentration that ranged from 4,400 - 268,000 fibers-bundles/gram of talc. Also, for the positive ATEM samples the results were also expressed as a weight percent.

ATLANTA

Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Tables 2 through 6 also provide the summary of ATEM findings for each of the 42 positive ATEM samples that were detected and the identification of the asbestos type for each of the measured amphibole asbestos fiber or bundles. This data includes length and width of the asbestos structure, individual fiber/bundle aspect ratios, and the average aspect ratio for each sample set.

All MAS and ISO PLM, Blount/PLM, ATEM analytical data, and photo-micrographs can be found in notebooks provided with this report that are labeled Historical 1960's, 1970's, 1980's, 1990's Early 2000's and JBP (with Asian)/STS and Imerys' Analysis.

Each of these notebooks contain ISO PLM and Blount bench sheets and optical photo-micrographs for each sample. ATEM count sheets, EDXA spectra, SAED micrographs, and ATEM photo-micrographs for each of the regulated amphibole asbestos structures analyzed are included.

All the J³ XRD and ISO PLM analyses are summarized in Tables 7 & 8. Also provided in Table 8 is a comparison of the J³ ISO-PLM to the MAS ISO-PLM for the same sample analyses.

Fibrous Talc JBP (with Asian)/STS Containers and Imerys Railroad Car Samples

The MAS ISO 22262-1 PLM analysis showed that fibrous talc was found in 56 of 57 total samples (55 of 55 JBP (with Asian)/STS and Imerys analyzed by this method and of the 72 samples analyzed by the Blount/PLM method, 28 of the samples were positive for fibrous talc.

The MAS ISO 22262-1 and Blount PLM samples had concentrations of fibrous talc that ranged from trace to common (moderate) amounts.

For the MAS ISO 22262-2 ATEM analysis (no J³ ATEM results), 42 of the 56 containers/samples (74%) analyzed contained trace amounts of fibrous talc. The estimated amount of fibrous talc per gram ranged from 290,000 talc fibers to 1,020,000 talc fibers per gram of cosmetic talcum powder.

No attempt was made to determine the amount of talc in 16 J³ STS sample analysis ATEM bench sheets since it was unclear to us regarding the J³ data collecting parameters and the amount of fibrous talc detected in the samples. This data is summarized in Table 9.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Process Blanks

All of the process blanks that were run with each set of talcum powder samples were found to be negative for any asbestos fiber types. The ATEM bench sheets and summary are provide in a separate document supplied with this report.

Discussion

XRD ISO 22262-3

All of the historical JBP/STS containers, where the source of the talc was either Italian or Vermont were found to be negative or non-detect by XRD. For the seven (7) Asian samples, two (2) of the samples were positive by the XRD analysis and one sample was inconclusive. The source of the talc that J&J used in these Asian products was from the Korean Dongyang talc mine in Korea. This talc mine has been characterized in the past as an asbestiform tremolite asbestos talc mine. The documentation concerning the Dongyang mine Korea talc deposit and J&J's use of the talc from that has been produced to J&J in the *Leavitt* deposition.

The results show that the XRD method for either the Italian or Vermont cosmetic talc samples was inadequate to detect any tremolite or anthophyllite amphiboles at the concentrations found by the other analytical methods used (ISO PLM, Blount PLM and ATEM).

For the Asian historical J&J cosmetic talc samples, two of the seven were positive for amphibole asbestos. When these same samples were analyzed by the ISO-PLM, Blount/PLM and ATEM methods, six of seven samples were found to be positive for tremolite asbestos.

Based on these results there seems to be little value, even as a screening tool, to use XRD for cosmetic talcum powder samples when the source of talc is either from the Italian or Vermont mines. However, if the source of talc is from the Dongyang mine in Korea, there may be some limited value to use XRD as a preliminary screening tool for a tremolitic type talc mine.

Since all 42 Vermont-sourced cosmetic talc samples were found to be negative for amphibole asbestos, there was no useful reason to analyze these additional 15 Imerys railroad car samples by XRD since the source of these Imerys cosmetic talc samples is from the same Vermont talc mines.

MAS PLM-ISO 22262-1 Method

The ISO PLM analysis performed by MAS detected 18 positives out of 56 samples that were analyzed. Many of the samples analyzed contained tremolite/actinolite cleavage fragments that had a typical aspect ratio of less than 3:1. No anthophyllite cleavage fragments were detected in any of the samples. For the positive samples, both regulated tremolite/actinolite and anthophyllite asbestos was detected at an estimated concentration of <0.1 weight percent.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



All of the asbestos structures identified were large bundles that were typically greater than 50 microns long and 10 to 20 microns wide. No individual asbestos bundles were detected in any of these samples with widths less than 5 to 10 microns. However, individual fibers contained in these large bundles could be resolved with dispersive staining. The estimated average aspect ratio of the individual asbestos fibers in the bundles was greater than 20:1.

Lee Poye of J³ Resources analyzed 22 historical JBP/STS by the ISO PLM that were provided by MAS, and their 16 historical Vermont STS samples by this method. All 38 ISO PLM analysis were reported as non-detects.

When the same 21 historical JBP/STS samples were analyzed by MAS, 8 of the samples were found to be positive.

These differing results between the two labs will require further investigation to understand the reason for these differences.

Blount/PLM Method

The Blount /PLM method heavy liquid separation method was able to increase the analytical sensitivity of the PLM analysis as compared to the ISO PLM method without heavy liquid separation. Of the 72 historical JBP (with Asian)/STS containers/samples analyzed by this method, 41 (57 %) were positive for regulated amphibole asbestos. For the positive samples, both regulated actinolite/tremolite and or anthophyllite asbestos were detected at a weight percent concentration for range of between <0.1% to 0.7 %. The estimated average aspect ratio of the individual asbestos fibers in the bundles was greater than 20:1.

When Dr. Blount published her heavy liquid separation PLM results in 1989/1990, one of the samples (sample I) was analyzed for tremolite asbestos. This sample was later determined to be a container of Johnson's Baby Powder.^{3, 4} The source talc used by J&J, for their JBP product at that time (1989-1990), would have been from Vermont.

Our use of Blount PLM method, in particular for the Vermont sourced cosmetic talc samples, shows that Alice Blount was right and that her method increases the sensitivity of the PLM analysis for the detection of amphibole asbestos.

Dr. Blount published the use of the heavy liquid separation method in 1989/1990, however this was not a new technology for the analysis of cosmetic talc by PLM. Historical documents produced by J&J in this litigation shows that J&J was aware of the heavy liquid separation ("preconcentrating") of talc for the detection of asbestos in the early 1970s.⁸ In 1973, a two

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



part heavy liquid separations method report, for both chrysotile and tremolite-actinolite fibers, was done by the Colorado School of Mines on behalf of Johnson & Johnson.⁷

For this report, the Colorado School of Mines stated in their Summary and Conclusion section that the heavy liquid concentrates are examined by optical microscopy (PLM), and that “the procedure is capable of detecting fibers present at a level of approximately 10 ppm or less”.⁸ A 10 ppm (parts per million) detection limit calculates to a weight percent of 0.001 % which is consistent with our Blount PLM analysis of <0.1 % for positive samples.

In March of 1974, R.C. Reynolds Jr. wrote a report for Windsor Minerals Inc. entitled “Analysis of Talc Products and Ores for Asbestiform Amphiboles”.⁹ This method also used heavy liquid separation and PLM analysis. The purpose of the study was to “develop methods for measuring the concentration of asbestiform amphiboles in fine-grained talc products and talc ores”. The report concluded that using this method detected 170 ppm (0.017 weight percent) of actinolite in a talc product and 2,300 ppm (0.23 weight percent) of actinolite in the talc ore.

Even though Johnson & Johnson was aware from as early as 1973 that the heavy liquid separation PLM method increased the sensitivity for the detection asbestos in talc, they never incorporated this method for the routine analysis of their talc sources. Even when Dr. Blount published her heavy liquid separation PLM method in 1990, J&J still did not incorporate this more sensitive PLM method for the detection of asbestos in their cosmetic talc products.

It is clear from our data that the use of the Blount/PLM heavy liquid separation method increases the analytical sensitivity for the analysis of cosmetic talc samples like the JBP/STS products as compared to the ISO PLM method. Since some of the ISO 22262-1 PLMs were positive for the same samples that were non-detects by the Blount method, it’s recommended that both PLM methods should be used to evaluating cosmetic talc samples for asbestos.

J³ Resources, Inc.

Our ATEM results for the historical JBP/STS samples are in agreement with the J³ Resources, Inc. ATEM for the STS samples that they analyzed. For the nine J³ samples that we verified from their TEM grids, J³ also reported nine positive TEM samples and all contained regulated amphibole asbestos fibers/bundles. This correlates to 100 % agreement between the two labs for those nine samples.

For the 49 asbestos fibers and or bundles reported by J³ in the 9 nine ATEM samples we examined, we verified 48 as regulated asbestos structures. This shows a 98 % validation rate

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



between the labs. Additional analysis may in fact increase the overall verification percentage. Also, 90 % of the regulated anthophyllite asbestos structures were bundles.

The two J³ ATEM samples (20180061-65D and 20180061-10D) that MAS did not verify, were verified to contained amphibole asbestos by the Blount PLM method. Even though we did not verify these two J³ samples by ATEM, we did find that these two J&J containers/samples were positive for regulated amphibole asbestos. For this reason, STS samples 20180061-65D and 20180061-10D were added to the overall list of positive 1980s historical J&J STS Vermont sourced talc containers.

ATEM-ISO 22262-2 Method

The ISO 22262-2 heavy liquid talc preparation method for the direct ATEM analysis of approximately 20 to 60 mg of talc on a 25 mm PC filter did not cause any significant overloading of the TEM grids with talc particles. The overall TEM grid particle loading was estimated at approximately 15 to 20 %. This consisted of talc particles and/or fibers as well as detectible amphibole asbestos. The ATEM results showed that out of the 70 JBP/STS and Imerys samples analyzed by ATEM, both the MAS and Lee Poye's analyses, 42 were positive for either the tremolite solid solution series (tremolite, winchite, richterite and actinolite) in this case only tremolite was detected, and or the anthophyllite sold solution series (anthophyllite, iron-rich anthophyllite and cummingtonite) asbestos. Each of the tremolite or anthophyllite asbestos solid solution series amphibole mineral types are regulated asbestos.¹⁸ Only iron-rich anthophyllite sold solution series asbestos structures was detected.

If the same weight of talc (approximately 20 to 60 mg) had been directly filtered onto a 25 mm PC filter, the TEM sample preparations would have been too severely overloaded with talc particles to be analyzed.

The heavy liquid density ATEM sample preparations demonstrated the utility of the ISO 22262-2 talc method by increasing the analytical sensitivity of the typical ATEM bulk talc analysis for the potential detection of amphibole asbestos. For these analyses the analytical ATEM achieved sensitivity/detection limits ranging from approximately 3,000 - 9,400 fibers-bundles/gram of talc. It also increased the analyst's efficiency without talc particle overloading issues.

This TEM talc loading problem vs. analytical sensitivity issued was been solved by the use of the heavy liquid density procedure, and should be the standard protocol for TEM cosmetic talc analysis.

¹⁸ Current Intelligence Bulletin 62: "Asbestos Fibers and Other Elongated Mineral Particles". State of the Science and Roadmap for Research" Revised Edition. NIOSH CIB62-Asbestos.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



As compared to either the XRD or the two PLM methods, the ATEM provides the most sensitive method for the detection of regulated amphibole asbestos in cosmetic talc.

Numerical Structure Count vs. Weight Percent

Our ATEM analysis showed that the asbestos fiber/bundle concentration, in the 41 positive samples ranged from approximately 4,400 to 268,000 fibers-bundles per gram of talcum powder. These positive results were also reported in weight percent that is based on a mathematical calculation. Also the analytical sensitivity or detection limit for the weight percent used here was based on the average size of all amphibole asbestos structures detected (187) in the 41 positive ATEM samples. This average size was determined to be 12.1 μm x 1.1 μm , with an aspect ratio of 11:1.

However, just reporting ATEM weight percent data does not provide any useful information for determining potential airborne exposure to asbestos structures of the bulk talc material being tested. The Introduction to the ISO 10312 Ambient Air TEM Method states the reasoning for this:

"Because the best available medical evidence indicates that the numerical fibre concentration and the fibre sizes are the relevant parameters for evaluation of the inhalation hazards, a fibre counting technique is the only logical approach".

Also, reporting the analytical sensitivity in weight by the ATEM method is very misleading since it is based on the theoretical mathematical calculation of one minimal fiber size which can give a computed analytical sensitivity in the millionths of a percent range. The misleading part of this is that in order to find that one small fiber during the ATEM analysis, you must have a real numerical fiber-bundle concentration per gram of talc for the analysis to possibly find that one fiber, otherwise this ATEM theoretical analytical sensitivity expressed in weight percent is meaningless.

An example of this problem can be found with the 2010 FDA report of the testing of cosmetic talcs that is published on their website. In that report, FDA states a TEM average limit of detection of 0.0000021 % wt. or 2.1×10^{-6} .¹⁹ However, when the ATEM analytical sensitivity was calculated from actual AMA TEM bench sheets, the numerical fiber concentration needed to find that one fiber was 13,500,000 fibers per/gram of talc.²⁰ A one fiber analytical sensitivity of that magnitude would have caused all of the ATEM analyses reported here to be non-detects.

¹⁹ www.FDA.gov.

²⁰ AMA Analytical Services, Inc. Report of Cosmetic Grade Talc, 2010.

ATLANTA

Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**Crystalline Habit and Asbestiform Definitions**

Each of the analytical protocols referenced in this report (PLM and TEM) all have a definition for asbestiform that is some variation of the following statement:

*Asbestiform: specific type of mineral fibrosity in which the fibers and fibrils possess high tensile strength and flexibility.*¹³

This definition of asbestiform in these protocols is only a general geological definition that might be used in the field to evaluate a particular commercial asbestos mine site, because the more fibrous, the greater economic value of the mine.

If this wasn't meant to be a general geological definition, then the methods would have incorporated into the counting protocols the procedures necessary for the determination or measurement of either the tensile strength or flexibility of the microscopic asbestos fibers and bundles. Of course, the methods do not measure flexibility or strength since that type of measurement is impossible by either PLM or ATEM. None of these methods even define what high tensile strength is, or how many measurements constitute a population. Interesting enough, as compared to the commercial forms of asbestos (chrysotile, amosite and crocidolite), both tremolite and anthophyllite asbestos have low tensile strength and poor flexibility and yet are regulated asbestos fibers.²¹

Also, the vast majority of the fibrous amphibole asbestos structures reported here were bundles (as defined by parallel fibers in an asbestos structure that are closer than one fiber diameter to each other.

It is unreasonable to think that breaking up a non-fibrous asbestos can form multiple individual fibers all in close proximity and parallel to each other and that meets the definition of a bundle. That is why fibrous mineral bundles have been recognized in the published literature as asbestiform for many years.

In Blount's publication, she states the following:

*"In addition, the tendency to bring down a disproportional number of larger particles has the true asbestiform amphiboles one generally sees some particles showing bundles of fibrils which removes any doubt about the nature of the amphibole".*⁵

²¹ "Asbestos in Ontario, Ontario Department of Mines and Northern Affairs." Industrial Mineral Report 36, 1971.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Dr. Wiley in her 1999 ASTM International publication stated that the finding of bundles shows that the structure should be considered asbestiform.²²

The total amount of regulated asbestos structures counted in the 42 positive ATEM samples was 187 bundles and fibers. Asbestos bundles, as compared to fibers, was approximately 96 % of the regulated asbestos structures counted in the ATEM positive samples.

By definition, these asbestos bundles are all classified as asbestiform. Nevertheless, all fibers and bundles reported by the ATEM method are regulated asbestos structures regardless of the geological definition for asbestiform.

For the single tremolite or anthophyllite fibers reported here, they all have been verified as to have formed in a fibrous crystalline habit since they are both fibrous and crystalline as well as meet the health based counting rules for regulated asbestos.²³

Aspect Ratio

Another aspect that must be considered is the milling process that is required to produce cosmetic grade talc and how it effects the overall asbestos size distribution and aspect ratios. This milling effects the asbestos size distribution in talcs was first discussed by Rohl, et al. in 1976.²⁴ In their publication the authors discuss how the talc milling process will break large fibers into a new size distribution in the submicroscopic range.

The average aspect ratio of the regulated asbestos tremolite and anthophyllite fibers and bundles measure by our ATEM analysis was approximately 11:1. This average aspect ratio was consistent with Campbell data for milled tremolite and anthophyllite asbestos. Our measured average aspect ratios were also consistent with Blount's data for tremolite asbestos reported in sample I (identified as JBP).^{4, 25}

For just the tremolite asbestos structure aspect ratios reported here, are also consistent with the NIST tremolite asbestos standard, Blount's tremolite asbestos findings for the off the shelf cosmetic talc container she tested, Campbell's milled tremolite asbestos and Langer & Nolan's

²² A.G. Wylie "The Habit of Asbestiform Amphiboles: Implications for the Analysis of Bulk Samples", ASTM Advances in Environmental Measurements Methods for Asbestos, STP 1342, Jan. 2000.

²³ Manual of Mineralogy, Twenty-First Edition, Revised, Cornelis Klein and Cornelis S. Hurlbert, Jr., John Wiley and Sons, 1999.

²⁴ Rohl, et al., "Consumer Talcum and Powders: Mineral and Chemical Characterization", Journal of Toxicology and Environmental Health, 2: pp. 255-284, 1976.

²⁵ Bureau of Mines Information Circular/Dept. of the Interior, Campbell, W.J., Blake, R.L., Brown, L.I., Cather, E.E. and Sjoberg, J.J.: United States Department of the Interior, "Selected Silicate Minerals and Their Asbestiform Varieties" IC 8751 1977.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



published tremolite asbestos aspect ratio of 10.9 to 1. In the Blount publication, it was reported that the average aspect for non-asbestiform tremolite (cleavage fragments) was approximately 2:1.

Asbestiform tremolite/anthophyllite aspect ratio summary is as follows:

1. MDL ATEM analysis: : 11:1
2. Blount : 9:1
3. Campbell : 9:1
4. Langer : 11:1
5. J&J 3/11/2018 : 10:1
6. NIST 1875 Tre. Std. : 10:1

All of these independent laboratory tremolite asbestos aspect ratio data shows that the tremolite and anthophyllite structures detected by our ATEM analysis shows that they are in fact asbestiform.

As anticipated and discussed below, neither chrysotile nor non-iron containing anthophyllite asbestos was found in any of the samples that were analyzed by ISO 22262-02 ATEM analysis.

So Called Background Asbestos

Of the 42 positive ATEM amphibole asbestos samples analyzed by MAS, nine of the JBP/STS talcum powder samples had only one amphibole asbestos fiber or bundle detected in 100 grid openings which represents the analytical sensitivity/limit of detection for this analysis.

Because tremolite/anthophyllite are non-commercial accessory amphibole minerals and are associated with talc, which is known to contain varying amounts of amphibole asbestos such as tremolite or anthophyllite, any positive findings are scientifically valid due to the amphibole minerals present in the talc.

There are no known commercial asbestos-containing products that used tremolite as an added ingredient, and only one specialty product ever used anthophyllite asbestos (corrosive resistant polymer chemical piping used at some chemical processing plants).

Further, there are no commercial amphibole tremolite/anthophyllite mines in North America, and tremolite and anthophyllite asbestos is not routinely analyzed at trace levels by typical commercial TEM laboratories. For these reasons it can be stated that: 1) there are no background air levels of tremolite/anthophyllite that could have interfered with or contaminated our JBP/STS and Imerys talcum sample analysis, and 2) for each set of JBP/STS

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



and Imerys talcum samples that were prepared and analyzed at this laboratory a process laboratory blank was prepared simultaneously to determine if there was any possible cross-contamination.^{26,27}

When these process laboratory blanks were analyzed by ATEM, no asbestos, including either tremolite, chrysotile or anthophyllite asbestos structures were found. Therefore, it can be stated that there was no cross-contamination during sample preparation of the JBP/STS talcum powder samples. Also, it is not our expectation that tremolite/anthophyllite asbestos would become a part of these homogenized talc products at a level identified as a matter of contamination prior to our custody of the samples. To do so would be practically impossible.

Also, these historical 72 JBP/STS containers and Imerys railroad samples came from their respective archived facilities. It is reasonable that the talcum powder in either the J&J containers or the Imerys railroad car samples were authentic and original to the specified date of manufacture (J&J containers) or time of product processing (Imerys). That is the talcum powder contained in these historical J&J container samples we analyzed, was the original talcum powder that was put into the container by J&J.

Non-Detects

For the 70 JBP (with Asian)/STS and Imerys talcum powder samples analyzed, ATEM results for 28 JBP/STS and Imerys talcum powder samples were less than the limit of detection of approximately 3,000 to 9,400 amphibole fibers/bundles per gram of talc. This result cannot be characterized to mean the samples do not contain amphibole asbestos. Rather, it can only be said that if there is any amphibole asbestos present, the number of fiber and bundles per gram of talc are at less than the detection limit for the ISO 22262-2 heavy liquid separation ATEM analysis used by this laboratory.

Chrysotile and Anthophyllite

As anticipated, neither chrysotile nor non-iron containing anthophyllite asbestos was found in any of the 70 samples that were analyzed by the ISO 22262-02 ATEM analysis. However, iron-rich anthophyllite was detected by ATEM because of its increased density.

²⁶ R.F. Dodson, M.F. O'Sullivan, D.R. Brooks and J.R. Bruce, "Asbestos Content of Omentum and Mesentery in Non-occupationally Exposed Individuals", *Toxicology and Industrial Health*, 2001: 17: pp. 138-143.

²⁷ R.J. Lee, D.R. Van Orden, "Airborne Asbestos in Buildings", *Regulatory Toxicology and Pharmacology*, 50 (2008) pp. 217-225.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



As with the ATEM method used here, the Blount PLM also uses heavy liquid separation in the sample preparation methodology.

The following is an explanation for the ATEM and Blount PLM chrysotile and anthophyllite results.

ATEM Chrysotile Separation

The ATEM heavy liquid method is specific for the asbestos tremolite solid solution series and the iron-rich anthophyllite solid solution series. The reason for this is that the heavy liquid solutions used for ATEM talc separation process had a density of 2.85 g/cm³. Therefore, any minerals with a similar density or lower would not be separated by this method such as chrysotile, which has a density of between 2.5 to 2.6 g/cm³.²⁸ The density for chrysotile is 0.020 g/cm³ to 0.025 g/cm³ less than the heavy liquid density used for the ATEM method and therefore, chrysotile asbestos would likely not be separated during JBP/STS and Imerys talcum sample preparation process.

As with the chrysotile non-detects reported here and in well over a hundred cosmetic talc analyses performed by MAS, the ATEM heavy liquid method has never detected chrysotile asbestos in the talcum powder, nor would we expect to have a positive result for chrysotile.

ATEM Anthophyllite Solid Solution Series Separation

The density of anthophyllite ranges from 2.85 to 3.20 g/cm³. This range of densities is primarily due to the addition of iron (Fe) into the chemical structure. For example, anthophyllite is part of a solid solution series (anthophyllite, iron-rich anthophyllite, ferro-anthophyllite, cummingtonite and grunerite) with a chemical formula of Mg₇Si₈O₂₂(OH)₂ to approximately Fe₇Mg₅Si₈O₂₂(OH)₂. Without Fe being present, the density of anthophyllite would be at the lower end of the density gradient of 2.85 g/cm³. Again, since anthophyllite is a solid solution series, the amount of iron atoms that can be substituted into the molecular formula of anthophyllite depends on the iron content of the surrounding rocks. This iron atom substituted could be 0, 1, 2 or higher which accounts for the range of anthophyllite densities described here.

With a low to non-iron anthophyllite density of approximately 2.85 to 2.86 or 2.87 g/cm³, which is the same or very close as the heavy liquid used for the ATEM analysis, one would not expect much separation of this type of either low-iron or non-iron containing anthophyllite from the

²⁸ Manual of Mineralogy, Twenty-First Edition, Revised, Cornelis Klein and Cornelis S. Hurlbert, Jr., John Wiley and Sons, 1999.

ATLANTA

Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



talcum powders using the ISO 22262-2 ATEM method and typically would not be detected by our analysis if present.

As expected, all of the anthophyllite series asbestos structures detected in these talcum powder samples by ATEM were iron-rich; no low iron or non-iron anthophyllite was detected in any of the ATEM samples. For the Vermont talc sourced samples, only three samples contained detectable amounts tremolite series asbestos fibers/bundles. However, this does not mean actinolite/tremolite is not present in significant concentrations in the Vermont talc mines. The ISO 22262-2 and Blount/PLM analysis detected regulated actinolite/tremolite asbestos in 30 of the JBP/STS containers and Imerys railroad car samples. These results is further verification of the utility of using both PLM (with and without heavy liquid separation) and ATEM for analyzing cosmetic talc samples.

Blount PLM Separation

As described above, the ATEM detected only iron-rich anthophyllite asbestos primarily in the Vermont-sourced talcum powder samples which is consistent with the Blount PLM results. Comparing the type of asbestos detected (tremolite and anthophyllite) between the Blount PLM and ATEM analysis where the same sample is positive by both methods, the asbestos types found (either anthophyllite and or actinolite/tremolite) can be different between the two as already discussed in this report.

For example, the analysis for the historical JBP/STS and Imerys samples, showed a number of samples where the only type of asbestos detected by ATEM was the iron-rich anthophyllite, while the Blount PLM not only detected the anthophyllite but also detected actinolite/tremolite. This amphibole asbestos detection difference between the two methods may at times be a function of the different heavy liquid densities used for the Blount/PLM and ATEM protocols.

The Blount PLM protocol specifies a heavy liquid density of 2.810 g/cm³ as compared to the ISO 22262-2 ATEM method that uses a heavy liquid density of 2.85 cm³. This difference of 0.04 g/cm³ is lower than the density of a low to non-iron anthophyllite. This lower density liquid used in the Blount PLM method would likely be more efficient in separating out the tremolite than the higher density liquid used by the ATEM method. Quite simply, the actinolite/tremolite structures would sink faster in the lower density liquid used by the Blount/PLM method. Also, the lower density liquid would be more efficient in separating out the low to non-iron anthophyllite asbestos.

This difference in the heavy liquid density between the two methods maybe explain why the number of positive Blount/PLMs for amphibole asbestos and the corresponding ATEM amphibole asbestos analysis were non-detect.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



This density difference coupled with the ATEM's bias to the large amphibole asbestos bundles detected by the PLM method shows how important it is to use both of these methods when analyzing cosmetic talc samples.

These overall results are both consistent with and validates our earlier March 11, 2018 Supplemental JBP/STS Report and subsequent analysis of plaintiffs' personal JBP/STS containers.

However, for our testimony, we will only be relying on this report and any future supplemental reports involving the analysis of historical JBP/STS and Imerys containers and samples except for the earlier two JBP samples used in both our Below the Waist and Baby powdering studies.

These results are also consistent with MVA's analysis of talc ore samples from both the Italian and Vermont talc mines where originally the samples were collected by or on behalf of defendant experts.^{29, 30}

Also, our analytical results are consistent with the historical analysis of both Johnson & Johnson's product samples as well as the analysis of talc ore from both the Italian and Vermont mines that have been performed in the past.^{31,32,33,34,35,36,37,38,39,40}

In addition to the above references, we are also relying on the current MAS Johnson & Johnson reliance document list that contains 102 references.⁴¹

²⁹ D.R. Veblen and C.W. Burnham, "New Biopyriboles Chester, Vermont: I. Descriptive Mineralogy", American Mineralogist, 63: 1000-1009, 1978.

³⁰ R.L. Virta, "The Phase Relationship of Talc and Amphiboles in a Fibrous Talc Sample, Bureau of Mines Report of Investigations 8923, United States Department of the Interior, 1985.

³¹ November 26, 1990 McCrone Environmental Services Report to Michael J. Keener from Kent Sprague concerning Samples CWM 90-28, 9-29 and 90-30

³² New Reagent Systems-Plant Trial at Windsor Minerals, Inc.

³³ March, 1974 Memo to: Windsor Minerals, Inc., Windsor, Vermont From R.C. Reynolds, Jr. Department of Earth Sciences, Dartmouth College, New Hampshire

³⁴ Forensic Analytical: Quantitative Analysis Report, Asbestos in Bulk Material.

³⁵ May 15, 1984 MSHA visit to Cyprus Industrial Minerals Company, South Plainfield Mill.

³⁶ Nov. 19, 1975 McCrone Assoc., Inc. Letter to Mr. Vernon Zeitz from Gene Grieger concerning talc ore sample analysis.

³⁷ Env. Consultant Report to Johnson & Johnson, April 1, 1977

³⁸ EMV Consultant Report to Johnson & Johnson, April 1, 1977

³⁹ Jan. 30, 1987 to J.A. Molnar and R.N. Miller from Joseph Schmidt Talc Analysis.

⁴⁰ March 14, 1988 to Mathew A. Nunes from Al Dickey, R.J. Lee Group Ref: Talc Samples 879-57 Talc L.

⁴¹ Johnson & Johnson Reliance and Reviewed Documents (95).

ATLANTA

Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



The ATEM and ISO PLM analysis also showed that the majority of the JBP/STS talcum powder samples contained fibrous (asbestiform) talc as compared to the platy talc that is present in all of JBP/STS and Imerys talcum powder samples. It has been reported by others that fibrous talc is a geological metamorphic transformation of anthophyllite to fibrous talc.^{42,43}

Conclusion

All Italian or Vermont talc sourced samples that were analyzed by XRD for asbestos were found to be negative or non-detect. These results show that the XRD method is not a useful tool at all for analyzing cosmetic talc samples (Italian or Vermont sourced talc) for the presence of asbestos amphiboles. Both the ISO and Blount PLM methods have better analytical sensitivities than XRD for these types of samples. It would be highly recommended that the Stimuli Group drop any consideration of using the XRD for their rewrite of USP 40 method.⁴⁴

The use of the ISO 22262-1 PLM analysis was not as sensitive as the Blount PLM method, but both methods have their strengths and weakness. On one hand the Blount PLM method has higher sensitivity, but is limited by the type of anthophyllite asbestos it can detect. The ISO PLM has lower sensitivity, but can detect the entire anthophyllite solid solution series. Also, these two PLM methods can detect the very large bundles that are typically missed by the ATEM analysis. There are few examples where the sample was positive by PLM and negative by ATEM.

It is recommend then that both the ISO PLM and the Blount method should be used as a screening tool for cosmetic talc analysis. Negative samples should then be required to be analyzed by the heavy liquid density ATEM method, which is still the best tool for these types of analysis.

Our ATEM analysis showed that the Italian and Vermont talc mines have a very distinct asbestos type profile from each other when analyzed by this method. The historical samples from the Italian mine contained primarily regulated tremolite asbestos fibers/bundles while the Vermont mine contained primarily anthophyllite asbestos. However, for the MDL samples that contained Vermont sourced talc, the PLM results show that only six positive samples contained anthophyllite only, the rest of the positive PLM samples, for the two methods, had detectable amounts of regulated actinolite/tremolite asbestos. These results show that anthophyllite asbestos maybe more prevalent in Vermont talc when analyzed by ATEM, but significant concentrations of actinolite/tremolite asbestos is also present as shown in the PLM analysis.

⁴² MVA Report: MVA11730 "Investigation of Italian Talc Samples for Asbestos", August 1, 2018.

⁴³ MVA Report: MVA12588 "Investigation of Talc Samples for Asbestos" April 23, 2018.

⁴⁴ Stimuli to the Revision Process-Modernization of Asbestos Testing in USP Talc.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



It is clear from these results that the three talc mines (Italian, Vermont and Korean) J&J used to manufacture their historical talcum powder products all contain asbestiform/regulated amphibole asbestos structures.


These overall results are both consistent and validates our earlier March 11, 2018 Supplemental JBP/STS Report and subsequent analysis of plaintiffs' personal JBP containers.

The most sensitive analytical method was ATEM with the ISO 22262-02 heavy liquid separation. It detected 42 positive samples out of the 70 JBP/STS and Imerys' talcum powder samples with a range in concentration of from approximately 4,400 fibers-bundles/gram to 268,000 fibers-bundles/gram of talc. Both tremolite series and anthophyllite series regulated asbestos were found in these samples.


There was a total of 50 positive containers (ATEM and PLM combined) out of the 72 tested that gave an overall 69 % positive result for the historical JBP/STS containers and Imerys' railroad car samples that were tested for this report.

These results are also consistent with our past analysis of Johnson & Johnson cosmetic talc samples that contained tremolite and anthophyllite regulated asbestos fibers, and with MVA's analysis of both the Italian and Vermont talc mine ore samples.

Based on the results of our analysis, it is our opinion that individuals who used Johnson & Johnson talcum powder products (Johnson's Baby Powder and Shower to Shower) in the past would have, more likely than not, been exposed to significant airborne levels of both regulated amphibole asbestos and fibrous (asbestiform) talc.

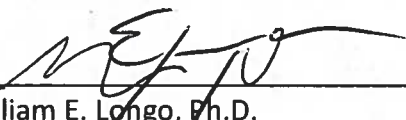

William E. Longo, Ph.D.
President

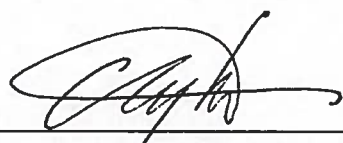

Mark W. Rigler, Ph.D.
Chief Science Officer and Senior Consultant

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259



Table 2

**Summary of Results for Johnson & Johnson's
 1960's Historical JBP & STS Samples**

| MAS Sample Number | Client Sample ID | Year of Mnfr. | Amphibole Asbestos Structures/g | Amphibole Asbestos wt. % | Analytical Sensitivity Structures/g | ISO PLM wt. % | Blount PLM wt. % |
|-------------------|----------------------|---------------|---------------------------------|--------------------------|-------------------------------------|---------------|------------------|
| M68503-010 JBP | 2018-0060-04 JBP 167 | 1960 | 31,400 | 0.00056 | 8,500 | NAD | <0.1 Trem/Act |
| M68503-009 JBP | 2018-0060-03 JBP 166 | 1962 | 17,700 | 0.0000057 | 8,800 | NAD | <0.1 Trem/Act |
| M68503-024 JBP | 2018-0060-76 JBP 119 | 1963 | <8,972 | <0.0000268 | 9,000 | NAD | NAD |
| M68503-004 JBP | 2018-0056-25 JBP 232 | 1964 | <2,990 | <0.0000268 | 3,000 | <0.1 Trem/Act | NAD |
| M68503-014 JBP | 2018-0060-20 JBP 183 | 1965 | 17,300 | 0.000044 | 8,700 | NAD | NAD |
| M68503-011 JBP | 2018-0060-06 JBP 169 | 1966 | <6,072 | <0.0000268 | 6,100 | NAD | NAD |
| M68503-027 STS | 2018-0061-09 STS 043 | 1966 | <2,998 | <0.0000268 | 3,000 | NAD | NAD |
| M68503-019 JBP | 2018-0060-44 JBP 087 | 1967 | 8,930 | 0.000045 | 8,900 | NAD | NAD |
| M69042-003 JBP | 20180056-31 JBP 238 | 1967 | 18,000 | 0.0000033 | 9,000 | NAD | NAD |
| M69042-005 JBP | 20180060-25 JBP 188 | 1967 | <8,740 | <0.0000268 | 8,700 | NAD | NAD |
| M69042-006 JBP | 20180060-49 JBP 092 | 1967 | <5,932 | <0.0000268 | 5,900 | NAD | NAD |
| M69042-007 JBP | 20180060-50 JBP 093 | 1967 | <5,930 | <0.0000268 | 5,900 | NAD | NAD |
| M68503-038 JBP | 2018-0061-40 STS 004 | 1968 | <3,045 | <0.0000268 | 3,050 | NAD | NAD |
| M68503-026 STS | 2018-0061-08 STS 042 | 1969 | 268,000 | 0.0064 | 8,650 | <0.1 Trem/Act | <0.1 Trem/Act |

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M68503-010**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 7.0 | 0.7 | 10.0 | Bundle | Tremolite |
| -2 | 12.0 | 0.9 | 13.3 | Bundle | Tremolite |
| -3 | 20.0 | 3.5 | 5.7 | Bundle | Tremolite |
| -4 | 3.7 | 0.5 | 7.4 | Bundle | Tremolite |

Average Aspect Ratio: 9.1

M68503-009

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 3.8 | 0.72 | 5.3 | Bundle | Tremolite |
| -2 | 3.5 | 0.42 | 8.3 | Bundle | Tremolite |

Average Aspect Ratio: 6.8

M68503-014

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 8.6 | 1.3 | 6.6 | Bundle | Tremolite |
| -2 | 7.9 | 0.84 | 9.4 | Bundle | Tremolite |

Average Aspect Ratio: 8.0

M68503-019

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 20.0 | 1.0 | 20.0 | Bundle | Anthophyllite |

Average Aspect Ratio: 20.0

M69042-003

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 4.52 | 0.44 | 10.3 | Bundle | Tremolite |
| -2 | 3.4 | 0.42 | 8.1 | Bundle | Anthophyllite |

Average Aspect Ratio: 9.2

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259

**M68503-026**

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 7.1 | 0.4 | 17.8 | Bundle | Tremolite |
| -2 | 10.6 | 1.8 | 5.9 | Bundle | Tremolite |
| -3 | 3.1 | 0.23 | 13.5 | Fiber | Tremolite |
| -4 | 7.6 | 0.8 | 9.5 | Bundle | Tremolite |
| -5 | 3.2 | 0.5 | 6.4 | Bundle | Tremolite |
| -6 | 7.3 | 1.2 | 6.1 | Bundle | Tremolite |
| -7 | 7.3 | 0.7 | 10.4 | Bundle | Tremolite |
| -8 | 9.8 | 1.8 | 5.4 | Bundle | Tremolite |
| -9 | 4.3 | 0.8 | 5.4 | Bundle | Tremolite |
| -10 | 7.0 | 0.8 | 8.8 | Bundle | Tremolite |
| -11 | 7.4 | 1.1 | 6.7 | Bundle | Tremolite |
| -12 | 13.3 | 0.7 | 19.0 | Bundle | Tremolite |
| 13 | 3.7 | 0.45 | 8.2 | Bundle | Tremolite |
| -14 | 3.4 | 0.6 | 5.7 | Bundle | Tremolite |
| -15 | 3.2 | 0.23 | 13.9 | Bundle | Tremolite |
| -16 | 30.8 | 4.0 | 7.7 | Bundle | Tremolite |
| -17 | 2.8 | 0.5 | 5.6 | Bundle | Tremolite |
| -18 | 7.9 | 0.92 | 8.6 | Bundle | Tremolite |
| -19 | 7.5 | 0.8 | 9.4 | Bundle | Tremolite |
| -20 | 3.9 | 0.6 | 6.5 | Bundle | Tremolite |
| -21 | 4.1 | 0.6 | 6.8 | Bundle | Tremolite |
| -22 | 3.0 | 0.46 | 6.5 | Bundle | Tremolite |
| -23 | 24.4 | 3.0 | 8.1 | Bundle | Tremolite |
| -24 | 6.5 | 1.1 | 5.9 | Bundle | Tremolite |
| -25 | 8.6 | 0.92 | 9.3 | Bundle | Tremolite |
| -26 | 27.6 | 3.7 | 7.5 | Bundle | Tremolite |
| -27 | 18.4 | 2.3 | 8.0 | Bundle | Tremolite |
| -28 | 75.9 | 4.6 | 16.5 | Bundle | Tremolite |
| -29 | 9.2 | 1.4 | 6.6 | Bundle | Tremolite |
| -30 | 4.6 | 0.7 | 6.6 | Bundle | Tremolite |
| -31 | 6.9 | 1.0 | 6.9 | Bundle | Tremolite |

Average Aspect Ratio: 8.7

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Table 3
Summary of Results for Johnson & Johnson's
1970's Historical JBP & STS Samples

| MAS/J ³ Sample Number | Client Sample ID | Year of Mnfr. | Amphibole Asbestos Structures/g | Amphibole Asbestos wt. % | Analytical Sensitivity Structures/g | ISO PLM wt. % | Blount PLM wt. % |
|--|-----------------------------------|------------------|---------------------------------------|-----------------------------|---|----------------------------|----------------------------|
| M68503-005 JBP | 2018-0056-30 JBP 237 | 1970 | <8,778 | <0.0000268 | 8,780 | NAD | NAD |
| M69042-009 JBP | 20180060-68 JBP 111 | 1970 | <6,371 | <0.0000268 | 6,370 | <0.1 Trem/Act | NAD |
| M68503-029 JBP | 2018-0061-17 STS 051 | 1971 | <8,417 | <0.0000268 | 8,400 | NAD | NAD |
| M68503-021 JBP | 2018-0060-54 JBP 097 | 1972 | <5,918 | <0.0000268 | 5,920 | NAD | NAD |
| M68503-023 JBP | 2018-0060-64 JBP107 | 1973 | 8,760 | 0.000017 | 8,730 | <0.1 Anth | <0.1 Anth |
| M68503-028 STS | 2018-0061-12 STS 046 | 1974 | 17,500 | 0.000098 | 5,800 | NAD | <0.1 Anth |
| 02D STS | 20180061-02D STS 1611A | 1975 | <9,400 | <0.0000268 | 9,400 | P ³ -NAD | NAD |
| M69042-001 JBP | 20180056-02D JBP 209 | 1975 | 22,400 | 0.000232 | 4,470 | <0.1 Trem/Act <0.1 Anth | <0.1 Trem/Act |
| M68503-046 STS | 2018-0061-57 STS 021 | 1975 | <5,863 | <0.0000268 | 5,900 | NAD | NAD |
| M68503-042 STS | 2018-0061-49 STS 013 | 1976 | 23,600 | 0.0024 | 5,890 | <0.1 Trem/Act <0.1 Anth | <0.1 Trem/Act |
| M68233-001 JBP | 2018-0015-01A1 JBP 084 | 1978 | 7,240 | 0.00001 | 7,240 | <0.1 Trem/Act | <0.1 Trem/Act |
| M68233-002 JBP | 2018-0015-01A2 JBP 084 | 1978 | 22,130 | 0.00023 | 7,400 | <0.1 Trem/Act | <0.1 Trem/Act |
| M68503-057 JBP | 2018-0070-10 2014.001.0612JBP | 1977 | 8,360 | 0.000038 | 8,360 | <0.1 Trem/Act <0.1 Anth | NAD |
| M68503-020 JBP | 2018-0060-53 JBP 096 | 1978 | 34,800 | 0.000053 | 8,690 | <0.1 Trem/Act <0.1 Anth | <0.1 Trem/Act |
| M69042-002 JBP | 20180056-06 JBP 213 | 1978 | 63,800 | 0.00048 | 9,120 | <0.1 Trem/Act <0.1 Anth | <0.1 Trem/Act <0.1 Anth |
| M69042-004 JBP | 20180056-34 JBP 241 | 1978 | 18,000 | 0.000012 | 6,020 | <0.1 Trem/Act <0.1 Anth | <0.1 Trem/Act <0.1 Anth |
| M69042-008 JBP | 20180060-67 JBP 110 | 1978 | 18,100 | 0.00086 | 6,020 | <0.1 Anth | <0.1 Anth |
| 07D STS | 20180070-07D 2014.001.0397 | 1978 | 82,000 | 0.00073 | 9,100 | J ³ -NAD | 0.2 Trem/Act 0.5 Anth |
| 15D STS | 20180061-15D STS 049 | 1978 | 61,000 | 0.0013 | 8,700 | J ³ -NAD | 0.3 Trem/Act |
| 50D STS | 20180061-50D STS 1605A | 1978 | <9,300 | <0.0000268 | 9,300 | J ³ -NAD | <0.1 Anth |
| M68503-059 JBP | 2018-0070-16 JBP 2014.001.1363 | 1979 | 17,100 | 0.00024 | 8,560 | <0.1 Trem/Act <0.1 Anth | <0.1 Trem/Act <0.1 Anth |

NAD: No asbestos detected J³NAD: Samples analyzed by Lee Poye

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M68503-023**

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 12.0 | 0.8 | 15.0 | Bundle | Anthophyllite |

Average Aspect Ratio: 10.7

M68503-028

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 18.8 | 1.8 | 10.4 | Bundle | Anthophyllite |
| -2 | 5.7 | 0.4 | 14.3 | Bundle | Anthophyllite |
| -3 | 6.0 | 0.9 | 6.7 | Bundle | Anthophyllite |

Average Aspect Ratio: 10.5

M69042-001

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 14.4 | 0.4 | 36.0 | Fiber | Anthophyllite |
| -2 | 2.3 | 0.4 | 5.8 | Fiber | Anthophyllite |
| -3 | 15.7 | 2.0 | 7.9 | Bundle | Anthophyllite |
| -4 | 10.0 | 0.2 | 50 | Fiber | Anthophyllite |
| -5 | 22.5 | 2.5 | 9 | Bundle | Anthophyllite |

Average Aspect Ratio: 21.7

M68503-042

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 19.0 | 2.0 | 9.5 | Bundle | Anthophyllite |
| -2 | 29.0 | 2.0 | 14.5 | Bundle | Anthophyllite |
| -3 | 6.7 | 0.8 | 8.4 | Bundle | Anthophyllite |
| -4 | 40.0 | 6.0 | 6.7 | Bundle | Anthophyllite |

Average Aspect Ratio: 9.8

M68233-001

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 6.8 | 0.9 | 7.6 | Fiber | Anthophyllite |

Average Aspect Ratio: 7.6

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M68233-002**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 27.7 | 0.7 | 36.7 | Bundle | Anthophyllite |
| -2 | 16.4 | 2.6 | 6.3 | Bundle | Anthophyllite |
| -3 | 7.6 | 0.5 | 15.2 | Fiber | Anthophyllite |

Average Aspect Ratio: 19.4

M68503-057

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 8.0 | 1.5 | 5.3 | Bundle | Tremolite |

Average Aspect Ratio: 5.3

M68503-020

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 8.5 | 0.42 | 20.2 | Bundle | Anthophyllite |
| -2 | 2.7 | 0.44 | 6.1 | Bundle | Tremolite |
| -3 | 4.62 | 0.62 | 7.5 | Bundle | Anthophyllite |
| -4 | 21.1 | 0.98 | 21.5 | Bundle | Anthophyllite |

Average Aspect Ratio: 13.8

M69042-002

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 35.4 | 1.8 | 19.7 | Bundle | Anthophyllite |
| -2 | 12.4 | 1.1 | 11.3 | Bundle | Anthophyllite |
| -3 | 6.4 | 1.1 | 5.8 | Bundle | Anthophyllite |
| -4 | 6.0 | 0.7 | 8.6 | Bundle | Anthophyllite |
| -5 | 34.5 | 1.1 | 31.4 | Bundle | Anthophyllite |
| -6 | 11.5 | 1.2 | 9.6 | Bundle | Anthophyllite |
| -7 | 11.5 | 1.0 | 11.5 | Bundle | Anthophyllite |

Average Aspect Ratio: 14.0

ATLANTA

Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M69042-004**

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 13.4 | 0.4 | 33.5 | Fiber | Anthophyllite |
| -2 | 4.2 | 0.38 | 11.1 | Bundle | Anthophyllite |
| -3 | 13.4 | 0.63 | 21.3 | Bundle | Anthophyllite |

Average Aspect Ratio: 21.9

M69042-008

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 3.9 | 0.5 | 7.8 | Bundle | Anthophyllite |
| -2 | 7.8 | 1.5 | 5.2 | Bundle | Anthophyllite |
| -3 | 5.3 | 0.5 | 10.6 | Bundle | Anthophyllite |

Average Aspect Ratio: 7.9

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**07D**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 3.5 | 0.25 | 14 | Fiber | Anthophyllite |
| -2 | 6.0 | 0.4 | 15 | Bundle | Anthophyllite |
| -3 | 7.5 | 0.2 | 37.5 | Bundle | Anthophyllite |
| -4 | 11.0 | 0.6 | 18.3 | Bundle | Anthophyllite |
| -5 | 4.0 | 0.25 | 16 | Bundle | Anthophyllite |
| -6 | 14.0 | 1.1 | 12.7 | Bundle | Anthophyllite |
| -7 | 8.5 | 0.4 | 21.3 | Bundle | Anthophyllite |
| -8 | 9.0 | 0.7 | 12.9 | Bundle | Anthophyllite |

Average Aspect Ratio: 18.5

15D

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 6.6 | 0.7 | 9.4 | Bundle | Anthophyllite |
| -2 | 5.2 | 0.22 | 23.6 | Bundle | Anthophyllite |
| -3 | 20.3 | 0.92 | 22.1 | Bundle | Anthophyllite |
| -4 | 27.0 | 1.5 | 18 | Bundle | Anthophyllite |
| -5 | 5.9 | 0.22 | 26.8 | Fiber | Anthophyllite |

Average Aspect Ratio: 20.0

M68503-059

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 12.0 | 0.4 | 30.0 | Bundle | Anthophyllite |
| -2 | 17.0 | 2.5 | 6.8 | Bundle | Anthophyllite |

Average Aspect Ratio: 18.4

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Table 4

**Summary of Results for Johnson & Johnson's
1980's Historical JBP & STS Samples**

| MAS/J ³ Sample Number | Client Sample ID | Year of Mnfr. | Amphibole Asbestos Structures/g | Amphibole Asbestos wt. % | Analytical Sensitivity Structures/g | ISO PLM wt. % | Blount PLM wt. % |
|--|--------------------------------------|------------------|---------------------------------------|--------------------------------|---|---------------------|---------------------------|
| 10D STS | 20180061-10D STS 044 | 1980 | N/A | N/A | N/A | J ³ -NAD | 0.2 Tre/Act <0.1 Anth |
| 38D STS | 20180061-38D STS 002 | 1980 | 53,000 | 0.003 | 7,600 | J ³ -NAD | 0.2 Tre/Act 0.2 Anth |
| 63D STS | 20180061-63D STS 027D | 1980-1981 | N/A | N/A | N/A | J ³ -NAD | 0.2 Tre/Act 0.2 Anth |
| 52D STS | 20180061-52D STS 016 | 1981 | 70,000 | 0.004 | 7,800 | J ³ -NAD | 0.2 Tre/Act 0.5 Anth |
| 65D STS | 20180061-65D STS 029 | 1981 | 95,000 | 0.0092 | 7,300 | J ³ -NAD | 0.2 Tre/Act 0.2 Anth |
| 37D STS | 20180061-37D STS 001 | 1982 | 9,300 | 0.00005 | 9,300 | J ³ -NAD | <0.1 Tre/Act <0.1 Anth |
| 45D STS | 20180061-45D STS 009 | 1982 | 9,000 | 0.0019 | 9,000 | J ³ -NAD | <0.1 Tre/Act |
| 51D STS | 20180061-51D STS 1606A | 1982 | <9,400 | N/A | 9,400 | J ³ -NAD | <0.1 Tre/Act |
| 66D STS | 20180061-66D STS 1610A | 1982 | <9,400 | N/A | 9,400 | J ³ -NAD | 0.1 Tre/Act |
| 21D STS | 20180061-21D STS 1614A | 1983 | <8,300 | N/A | 8,300 | J ³ -NAD | <0.1 Tre/Act <0.1 Anth |
| M68503- 001 JBP | 2018-0051-34 JBP 294 | 1984 | 18,700 | 0.000036 | 6,240 | <0.1Tre/Act | <0.1 Tre/Act |
| M69042- 010 JBP | 2018-0070-86 2014.001.5102 JBP | 1985 | 12,500 | 0.000035 | 6,200 | <0.1Tre/Act | <0.1 Anth |
| 31F STS | 20180061-31F STS 065 | 1986 | 22,000 | 0.0029 | 7,300 | J ³ -NAD | 0.3 Tre/Act < 0.1 Anth |
| 31G STS | 20180061-31G STS 065 | 1986 | 30,000 | 0.00052 | 7,500 | J ³ -NAD | 0.7 Tre/Act |
| M69751- 037 Imerys | 20180314-03 Imerys | 1989 | 59,000 | 0.000089 | 4500 | <0.1 Tre/Act | <0.1 Tre/Act <0.1 Anth |

NAD: no asbestos detected. J³NAD: Samples analyzed by Lee Poye.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**38D**

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 3.2 | 0.6 | 5.3 | Bundle | Anthophyllite |
| -2 | 3.6 | 0.7 | 5.1 | Bundle | Anthophyllite |
| -3 | 18.9 | 1.5 | 12.6 | Bundle | Anthophyllite |
| -4 | 6.0 | 0.9 | 6.7 | Bundle | Anthophyllite |
| -5 | 6.2 | 1.1 | 5.6 | Bundle | Anthophyllite |
| -6 | 3.5 | 0.4 | 8.9 | Fiber | Anthophyllite |
| -7 | 6.0 | 0.3 | 20.0 | Bundle | Anthophyllite |
| -8 | 3.1 | 0.25 | 12.4 | Bundle | Anthophyllite |

Average Aspect Ratio: 9.6

52D

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 46.5 | 1.5 | 31 | Bundle | Anthophyllite |
| -2 | 29.2 | 1.5 | 19.5 | Bundle | Anthophyllite |
| -3 | 10.0 | 0.5 | 20 | Bundle | Anthophyllite |
| -4 | 22.5 | 1.3 | 17.3 | Bundle | Anthophyllite |
| -5 | 11.7 | 1.0 | 11.7 | Bundle | Anthophyllite |
| -6 | 9.5 | 1.0 | N/A | Bundle | Talc |
| -7 | 31.0 | 1.0 | 31 | Bundle | Anthophyllite |
| -8 | 9.0 | 0.25 | 36 | Fiber | Anthophyllite |
| -9 | 3.8 | 0.3 | 12.7 | Bundle | Anthophyllite |

Average Aspect Ratio: 22.4

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**65D**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 18.0 | 1.5 | 12 | Bundle | Anthophyllite |
| -2 | 14.3 | 1.5 | 9.5 | Bundle | Anthophyllite |
| -3 | 20.2 | 1.3 | 15.5 | Bundle | Anthophyllite |
| -4 | 11.2 | 0.7 | 16 | Bundle | Anthophyllite |
| -5 | 6.8 | 0.7 | 9.7 | Bundle | Anthophyllite |
| -6 | 13.3 | 0.7 | 19 | Bundle | Anthophyllite |
| -7 | 22.3 | 1.5 | 14.9 | Bundle | Anthophyllite |
| -8 | 17.0 | 0.22 | 77.3 | Fiber | Anthophyllite |
| -9 | 28.0 | 2.5 | 11.2 | Bundle | Anthophyllite |
| -10 | 9.5 | 1.3 | 7.3 | Bundle | Anthophyllite |
| -11 | 12.0 | 0.8 | 15 | Bundle | Anthophyllite |
| -12 | 10.2 | 0.4 | 25.5 | Bundle | Anthophyllite |
| -13 | 23.0 | 3.5 | 6.6 | Bundle | Anthophyllite |

Average Aspect Ratio: 18.4

37D

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 15.8 | 2.6 | 6.1 | Bundle | Anthophyllite |

Average Aspect Ratio: 6.1

45D

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 17.5 | 2.2 | 8.0 | Bundle | Anthophyllite |

Average Aspect Ratio: 8.0

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M68503-001**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 9.89 | 0.46 | 21.5 | Bundle | Anthophyllite |
| -2 | 3.2 | 0.59 | 5.4 | Bundle | Tremolite |
| -3 | 10.4 | 1.38 | 7.5 | Bundle | Tremolite |

Average Aspect Ratio: 11.5

M69042-010

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 9.2 | 1.5 | 6.1 | Bundle | Anthophyllite |
| -2 | 8.9 | 0.42 | 21.2 | Bundle | Anthophyllite |

Average Aspect Ratio: 11.5

31F

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 21.6 | 1.3 | 16.6 | Bundle | Anthophyllite |

Average Aspect Ratio: 16.6

31G

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 30.1 | 0.7 | 43 | Bundle | Anthophyllite |
| -2 | 13.5 | 0.7 | 19.3 | Bundle | Anthophyllite |
| -3 | 7.0 | 0.7 | 10 | Bundle | Anthophyllite |
| -4 | 22.5 | 1.5 | 15 | Bundle | Anthophyllite |

Average Aspect Ratio: 21.8

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259



Table 5
Summary of Results for Johnson & Johnson's
1990's Historical JBP & Imerys Samples

| MAS/J ³ Sample Number | Client Sample ID | Year of Mnfr. | Amphibole Asbestos Structures/g | Amphibole Asbestos wt. % | Analytical Sensitivity Structures/g | ISO PLM wt. % | Blount PLM wt. % |
|--|-------------------------|------------------|---------------------------------------|--------------------------------|---|---------------------------|---------------------------|
| M69757-005 | 20180343-03A Imerys | 1990 | 27000 | 0.000010 | 4500 | <0.1 Tre/Act <0.1 Anth | <0.1 Tre/Act <0.1 Anth |
| M69757-007 | 20180358-01A Imerys | 1990 | 39000 | 0.00030 | 4300 | <0.1 Tre/Act | <0.1 Tre/Act <0.1 Anth |
| M69751-039 | 20180320-01A Imerys | 1991 | <4400 | <0.0000268 | 4400 | NAD | NAD |
| M69751-040 | 20180320-13A Imerys | 1991 | 13000 | 0.000015 | 4500 | NAD | <0.1 Tre/Act |
| M68503-016 JBP | 2018-0060-33 JBP 001 | 1994 | <9000 | <0.0000268 | 9000 | NAD | NAD |
| M69757-004 | 20180339-05A Imerys | 1994 | <4400 | <0.0000268 | <4400 | NAD | NAD |
| M69751-036 | 20180313-02A Imerys | 1995 | 4400 | 0.00000022 | 4400 | NAD | NAD |
| M68503-017 JBP | 2018-0060-38 JBP 006 | 1996 | <9000 | <0.0000268 | 9000 | NAD | NAD |
| M69757-006 | 20180344-04A Imerys | 1996 | <4400 | <0.0000268 | 4400 | NAD | NAD |
| M69751-002 | 20180315-021A Imerys | 1999 | <4400 | <0.0000268 | 4400 | NAD | NAD |

NAD: no asbestos detected.

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M69757-005**

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 2.32 | 0.21 | 11.0 | Bundle | Anthophyllite |
| -2 | 6.1 | 0.42 | 14.5 | Bundle | Anthophyllite |
| -3 | 4.4 | 0.84 | 5.2 | Bundle | Anthophyllite |
| -4 | 2.72 | 0.42 | 6.5 | Bundle | Anthophyllite |
| -5 | 8.7 | 0.38 | 22.9 | Bundle | Anthophyllite |
| -6 | 4.82 | 0.76 | 6.3 | Bundle | Anthophyllite |

Average Aspect Ratio: 11.1

M69757-007

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 5.6 | 1.1 | 5.1 | Bundle | Anthophyllite |
| -2 | 4.6 | 0.64 | 7.2 | Bundle | Anthophyllite |
| -3 | 9.9 | 0.36 | 27.5 | Fiber | Anthophyllite |
| -4 | 10.9 | 0.35 | 31.1 | Bundle | Anthophyllite |
| -5 | 11.7 | 1.4 | 8.4 | Bundle | Anthophyllite |
| -6 | 11.6 | 1.1 | 10.5 | Bundle | Actinolite |
| -7 | 11.8 | 1.6 | 7.4 | Bundle | Anthophyllite |
| -8 | 8 | 1.3 | 6.2 | Bundle | Anthophyllite |
| -9 | 49.4 | 2.1 | 23.5 | Bundle | Talc-Anth |

Average Aspect Ratio: 11.1

M69751-040

| Str. # | Length (μm) | Width (μm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 7.4 | 0.62 | 11.9 | Bundle | Anthophyllite |
| -2 | 14.9 | 0.74 | 20.1 | Bundle | Anthophyllite |
| -3 | 6.72 | 0.62 | 10.8 | Bundle | Anthophyllite |

Average Aspect Ratio: 11.1

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259

**M69751-036**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 6.3 | 0.18 | 35.0 | Bundle | Tremolite |

Average Aspect Ratio: 35.0

Table 6
Summary of Results for Johnson & Johnson's
2000's Historical Imerys Samples

| MAS/J ³ Sample Number | Client Sample ID | Year of Mnfr. | Amphibol e Asbestos Structures /g | Amphibole Asbestos wt. % | Analytical Sensitivity Structures/g | ISO PLM wt. % | Blount PLM wt. % |
|--|------------------|------------------|--|--------------------------------|---|------------------|---------------------|
| M69751-001 | 2018-0315-01A | 2001-2002 | 4400 | 0.000017 | 4400 | NAD | NAD |
| M69751-006 | 2018-0316-020A | 2000 | 4600 | 0.0000024 | 4600 | NAD | <0.1 Tre/Act |
| M69751-007 | 2018-0316-021A | 2000 | 8700 | 0.000024 | 4300 | NAD | NAD |
| M69751-038 | 2018-0317-04A | 2000 | <4400 | <0.0000268 | 4400 | NAD | NAD |
| M69751-004 | 2018-0315-040A | 2001 | <4300 | <0.0000268 | 4300 | NAD | NAD |
| M69751-008 | 2018-0316-022A | 2003 | <4400 | <0.0000268 | 4400 | NAD | NAD |

NAD: no asbestos detected.

M69751-001

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 10.5 | 1.2 | 8.8 | Bundle | Tremolite |

Average Aspect Ratio: 8.8

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259

**M69751-006**

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 8.2 | 0.5 | 16.4 | Bundle | Tremolite |

Average Aspect Ratio: 35.0

M69751-007

| Str. # | Length (µm) | Width (µm) | Aspect Ratio | Structure Type | Asbestos Type |
|--------|-------------|------------|--------------|----------------|---------------|
| -1 | 16.0 | 1 | 16.0 | Bundle | Tremolite |
| -2 | 7.6 | 0.9 | 8.4 | Bundle | Tremolite |

Average Aspect Ratio: 12.2

Table 7
Summary of J³ XRD & PLM Analysis
Asian

| MAS Sample Number | Date of Manuf. | ISO XRD |
|-------------------|----------------|--------------|
| M69248-001 | N/A | NAD |
| M69248-002 | 1979 | inconclusive |
| M69248-003 | 1980-1984 | positive |
| M69248-004 | N/A | NAD |
| M69248-005 | N/A | NAD |
| M69248-006 | 1982 | NAD |
| M69248-007 | N/A | positive |

NAD: no asbestos detected N/A: dates of manufacture not provided by J&J

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Table 8
Summary of J³ XRD & PLM Analysis
1960's

| MAS Sample Number | Date of Manuf. | ISO XRD | J3 ISO PLM % | MAS ISO PLM % |
|-------------------|----------------|---------|--------------|---------------|
| M68503-010 | 1960 | NAD | NAD | NAD |
| M68503-009 | 1962 | NAD | NAD | NAD |
| M68508-024 | 1963 | NAD | NAD | NAD |
| M68503-004 | 1964 | NAD | NAD | <0.1 Trem/Act |
| M68503-014 | 1965 | NAD | NAD | NAD |
| M68503-011 | 1966 | NAD | NAD | NAD |
| M68503-027 | 1966 | NAD | NAD | NAD |
| M69042-007 | 1966-1967 | NAD | --- | NAD |
| M69042-003 | 1967 | NAD | --- | NAD |
| M69042-005 | 1967 | NAD | --- | NAD |
| M69042-006 | 1967 | NAD | --- | NAD |
| M68503-019 | 1967 | NAD | NAD | NAD |
| M68503-038 | 1968 | NAD | NAD | NAD |
| M68503-026 | 1969 | NAD | NAD | <0.1 Trem/Act |

NAD: no asbestos detected

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259



Summary of J³ XRD & J³/ MAS PLM Analysis

1970's

| MAS Sample Number | Date of Manuf. | ISO XRD | J3 ISO PLM % | MAS ISO PLM % |
|-------------------|----------------|---------|--------------|----------------------------|
| M68503-005 | 1970 | NAD | NAD | NAD |
| M69042-009 | 1970 | NAD | ---* | <0.1 Trem/Act |
| M68503-029 | 1971 | NAD | NAD | NAD |
| M68503-021 | 1972 | NAD | NAD | NAD |
| M68503-023 | 1973 | NAD | NAD | <0.1 Anth. |
| M68503-028 | 1974 | NAD | NAD | NAD |
| 02D | 1975 | NAD | NAD | --- |
| M69042-001 | 1975 | NAD | --- | <0.1 Trem/Ac <0.1 Anth |
| M68503-046 | 1975 | NAD | NAD | NAD |
| M68503-042 | 1976 | NAD | NAD | <0.1 Trem/Act <0.1 Anth |
| M68233-001 | 1978 | NAD | — | <0.1 Trem/Act |
| M68233-002 | 1978 | NAD | — | <0.1 Trem/Act |
| M68503-057 | 1978 | NAD | NAD | <0.1 Trem/Act <0.1 Anth |
| M68503-020 | 1978 | NAD | NAD | <0.1 Anth |
| M69042-002 | 1978 | NAD | --- | <0.1 Trem/Act <0.1 Anth |
| M69042-004 | 1978 | NAD | — | <0.1 Trem/Act <0.1 Anth |
| M69042-008 | 1978 | NAD | --- | <0.1 Anth |
| 07D | 1978 | NAD | NAD | -- |
| 15D | 1978 | NAD | NAD | -- |
| 50D | 1978 | NAD | NAD | -- |
| M68503-059 | 1979 | NAD | NAD | <0.1 Trem/Act <0.1 Anth |

NAD: no asbestos detected *: not analyzed

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Summary of J³ XRD & PLM Analysis

1980's

| MAS/P ³ Sample Number | Date of Manuf. | ISO XRD | J3 ISO PLM | MAS ISO PLM |
|----------------------------------|----------------|---------|------------|----------------|
| 10D | 1980 | NAD | NAD | --* |
| 38D | 1980 | NAD | NAD | -- |
| 63D | 1980-1981 | NAD | NAD | -- |
| 52D | 1981 | NAD | NAD | -- |
| 65D | 1981 | NAD | NAD | -- |
| 37D | 1982 | NAD | NAD | -- |
| 45D | 1982 | NAD | NAD | -- |
| 51D | 1982 | NAD | NAD | -- |
| 66D | 1982 | NAD | NAD | -- |
| 21D | 1983 | NAD | NAD | -- |
| M68503-001 | 1984 | NAD | NAD | <0.1% Trem/Act |
| M69042-010 | 1985 | NAD | --- | <0.1% Trem/Act |
| 31F | 1986 | NAD | NAD | -- |
| 31G | 1986 | NAD | NAD | -- |

NAD: no asbestos detected, *: not analyzed

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Summary of J³ XRD Analysis

1990's

| MAS Sample Number | Date of Manuf. | ISO XRD |
|-------------------|----------------|---------|
| M69757-005 | 1990 | N/A |
| M69757-007 | 1990 | N/A |
| M69751-039 | 1991 | N/A |
| M69751-040 | 1991 | N/A |
| M68503-016 | 1994 | NAD |
| M69757-004 | 1994 | N/A |
| M69751-036 | 1995 | N/A |
| M68503-017 | 1996 | NAD |
| M69757-006 | 1996 | N/A |
| M69751-002 | 1999 | N/A |

NAD: no asbestos detected N/A: Sample not analyzed

Summary of J³ XRD Analysis

Early 2000's

| MAS Sample Number | Date of Manuf. | ISO XRD |
|-------------------|----------------|---------|
| M69751-005 | 2000 | N/A |
| M69751-007 | 2000 | N/A |
| M69751-039 | 2000 | N/A |
| M69751-040 | 2000 | N/A |
| M69751-004 | 2001 | N/A |
| M69751-036 | 2001 | N/A |

N/A: not analyzed

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Table 9

Occurrence of Fibrous Talc in Historical J&J Cosmetic Talcum Powders

1960's

| Sample # | Date of Manufacture | TEM Analysis F.T | Talc Fibers per gram | ISO22262-1 PLM Analysis |
|------------|---------------------|------------------|----------------------|-------------------------|
| M68503-010 | 1960 | Trace | 852,000 | Trace |
| M68503-009 | 1962 | Trace | 882,000 | Trace |
| M68503-024 | 1963 | Trace | 896,000 | Trace |
| M68503-004 | 1964 | Trace | 298,000 | Trace |
| M68503-014 | 1965 | Trace | 864,000 | Trace |
| M68503-027 | 1966 | Trace | 290,000 | Trace |
| M68503-011 | 1967 | NSD | N/A | Trace |
| M68503-019 | 1967 | Trace | 892,000 | Trace |
| M69042-003 | 1967 | Trace | 890,000 | Moderate |
| M69042-005 | 1967 | Trace | 873,000 | Moderate |
| M69042-006 | 1967 | NSD | N/A | Moderate |
| M69042-007 | 1967 | NSD | N/A | Moderate |
| M68503-038 | 1968 | Trace | 304,000 | Trace |
| M68503-026 | 1969 | Trace | 864,000 | Trace |

N/A: Not applicable, fibrous talc calculations not possible

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



1970's

| Sample # | Date of Manufacture | TEM Analysis F.T | Talc Fibers per gram | ISO22262-1 PLM Analysis |
|------------|---------------------|------------------|----------------------|-------------------------|
| M68503-005 | 1970 | Trace | 877,000 | Trace |
| M69042-009 | 1970 | Trace | 637,000 | Moderate |
| M68503-029 | 1971 | Trace | 1,020,000 | Trace |
| M68503-021 | 1972 | NSD | N/A | Trace |
| M68503-023 | 1973 | Trace | 876,000 | Trace |
| M68503-028 | 1974 | NSD | N/A | Trace |
| 02D | 1975 | 1 Fiber* | N/A | N/A |
| M69042-001 | 1975 | NSD | N/A | N/A |
| M68503-046 | 1975 | NSD | N/A | Trace |
| M68503-042 | 1976 | NSD | N/A | Trace |
| M68233-001 | 1978 | NSD | N/A | Trace |
| M68233-002 | 1978 | Trace | 735,00 | Trace |
| M68503-057 | 1977 | NSD | N/A | Trace |
| M68503-020 | 1978 | Trace | 868,000 | Trace |
| M69042-002 | 1978 | Trace | 890,000 | Moderate |
| M69042-004 | 1978 | Trace | 603,000 | Moderate |
| M69042-008 | 1978 | NSD | N/A | Moderate |
| 07D | 1978 | 1 Fiber | N/A | NSD |
| 15D | 1978 | None reported | N/A | NSD |
| 50D | 1978 | 3 Fibers | N/A | NSD |
| M68503-059 | 1979 | Trace | 855,000 | Trace |

*No criteria provide by P³ for fibrous talc estimation. N/A: Not applicable, fibrous talc calculations not possible

ATLANTA
 Corporate Headquarters
 3945 Lakefield Court
 Suwanee, GA 30024
 (770) 866-3200 FAX (770) 866-3259



1980's

| Sample # | Date of Manufacture | TEM Analysis F.T | Talc Fibers per gram | ISO22262-1 PLM Analysis |
|------------|---------------------|------------------|----------------------|-------------------------|
| 38D | 1980 | None Reported | N/A | N/A |
| 52D | 1981 | None Reported | N/A | N/A |
| 65D | 1981 | None Reported | N/A | N/A |
| 37D | 1982 | 2 Fibers* | N/A | N/A |
| 45D | 1982 | 3 Fibers | N/A | N/A |
| 51D | 1982 | None Reported | N/A | N/A |
| 66D | 1982 | None Reported | N/A | N/A |
| 21D | 1983 | 1 Fiber | N/A | N/A |
| M68503-001 | 1984 | Trace | 624,000 | Trace |
| M69042-010 | 1985 | Trace | 624,000 | Moderate |
| 31F | 1986 | 1 Fiber | N/A | N/A |
| 31G | 1986 | 2 Fibers | N/A | N/A |
| M69751-037 | 1989 | Trace | 548,000 | Moderate |

*No criteria provide by P³ for fibrous talc estimation. N/A: Not applicable, fibrous talc calculations not possible

1990's

| Sample # | Date of Manufacture | TEM Analysis F.T | Talc Fibers Per gram | ISO22262-1 PLM Analysis |
|------------|---------------------|------------------|----------------------|-------------------------|
| M69757-005 | 1990 | Trace | 434,000 | Moderate |
| M69757-007 | 1990 | Trace | 478,000 | Moderate |
| M69751-039 | 1991 | Trace | 497,000 | Moderate |
| M69751-040 | 1991 | Trace | 451,000 | Moderate |
| M68503-016 | 1994 | Trace | 898,000 | Trace |
| M69757-004 | 1994 | Trace | 403,000 | Trace |
| M69751-036 | 1995 | Trace | 438,000 | Moderate |
| M68503-017 | 1996 | Trace | 895,000 | Trace |
| M69757-006 | 1996 | Trace | 439,000 | Moderate |
| M69751-002 | 1999 | NSD | N/A | Moderate |

N/A: Not applicable, fibrous talc calculations not possible

ATLANTA
Corporate Headquarters
3945 Lakefield Court
Suwanee, GA 30024
(770) 866-3200 FAX (770) 866-3259



Early 2000's

| Sample # | Date of Manufacture | TEM Analysis F.T | Talc Fibers Per gram | ISO22262-1 PLM Analysis |
|------------|---------------------|------------------|----------------------|-------------------------|
| M69751-001 | 2000 | Trace | 471,000 | Moderate |
| M69751-006 | 2000 | Trace | 439,000 | Trace |
| M69751-007 | 2000 | Trace | 458,000 | Trace |
| M69571-038 | 2000 | Trace | 437,000 | Moderate |
| M69751-004 | 2001 | Trace | 434,000 | Moderate |
| M69751-008 | 2003 | NSD | N/A | Trace |

N/A: Not applicable, fibrous talc calculations not possible

Asian

| Sample # | Date of Manufacture | TEM Analysis F.T | Talc Fibers per gram | ISO22262-1 PLM Analysis |
|------------|---------------------|------------------|----------------------|-------------------------|
| M69248-001 | Unknown* | Trace | 577,000 | Trace |
| M69248-002 | 1979 | Trace | 582,000 | Trace |
| M69248-003 | 1980-1984 | Trace | 930,000 | Trace |
| M69248-004 | unknown | Trace | 860,000 | Trace |
| M69248-005 | unknown | Trace | 870,000 | Trace |
| M69248-006 | 1982 | NSD | N/A | Trace |
| M69248-007 | unknown | NSD | N/A | Trace |

*J&J did not provide date of manufacture. N/A: Not applicable, fibrous talc calculations not possible